

Alarms

Set up on cc200 Touch Screen

Engineering Manual

Ver 18.05.14.xx

Title Page

© 2003 Comeragh Controls Ltd

No part of this document may be reproduced by any process without the prior written permission from Comeragh Controls Ltd.

The information in this document is provided for reference only. While every effort has been made to make sure it is accurate and complete, Comeragh Controls Ltd does not accept any liability arising out of the application or use of the information or products described herein. Moreover, Comeragh Controls Ltd reserves the right to alter specifications or procedures without notice.

This document may contain or refer to information or products protected by copyright or patents and does not convey any license under the patent rights of Comeragh Controls Ltd nor the rights of others.

All products referred herein are trademarks of their respective owners.

Publication details:

Title: iCon Touch Screen User Manual

Part Number: CC-200-Alarms

Produced by:

Product Support Department

Comeragh Controls Ltd

Upper Irish Town


Clonmel

Co. Tipperary


1. Access Engineering Menu



Step 1. Press Setup

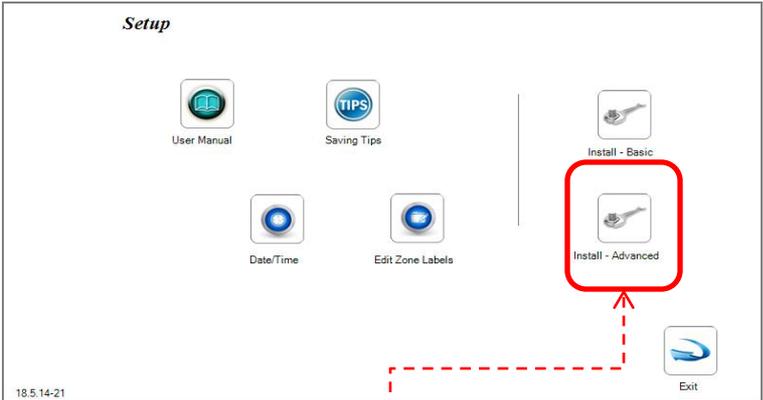


Step 2. Press - Install Advanced

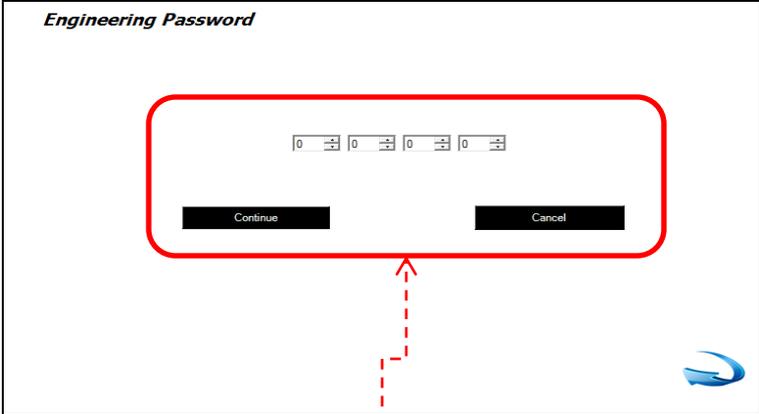

3. Enter code 3105 & Press Continue

2. Engineering Menu – BMS Interface

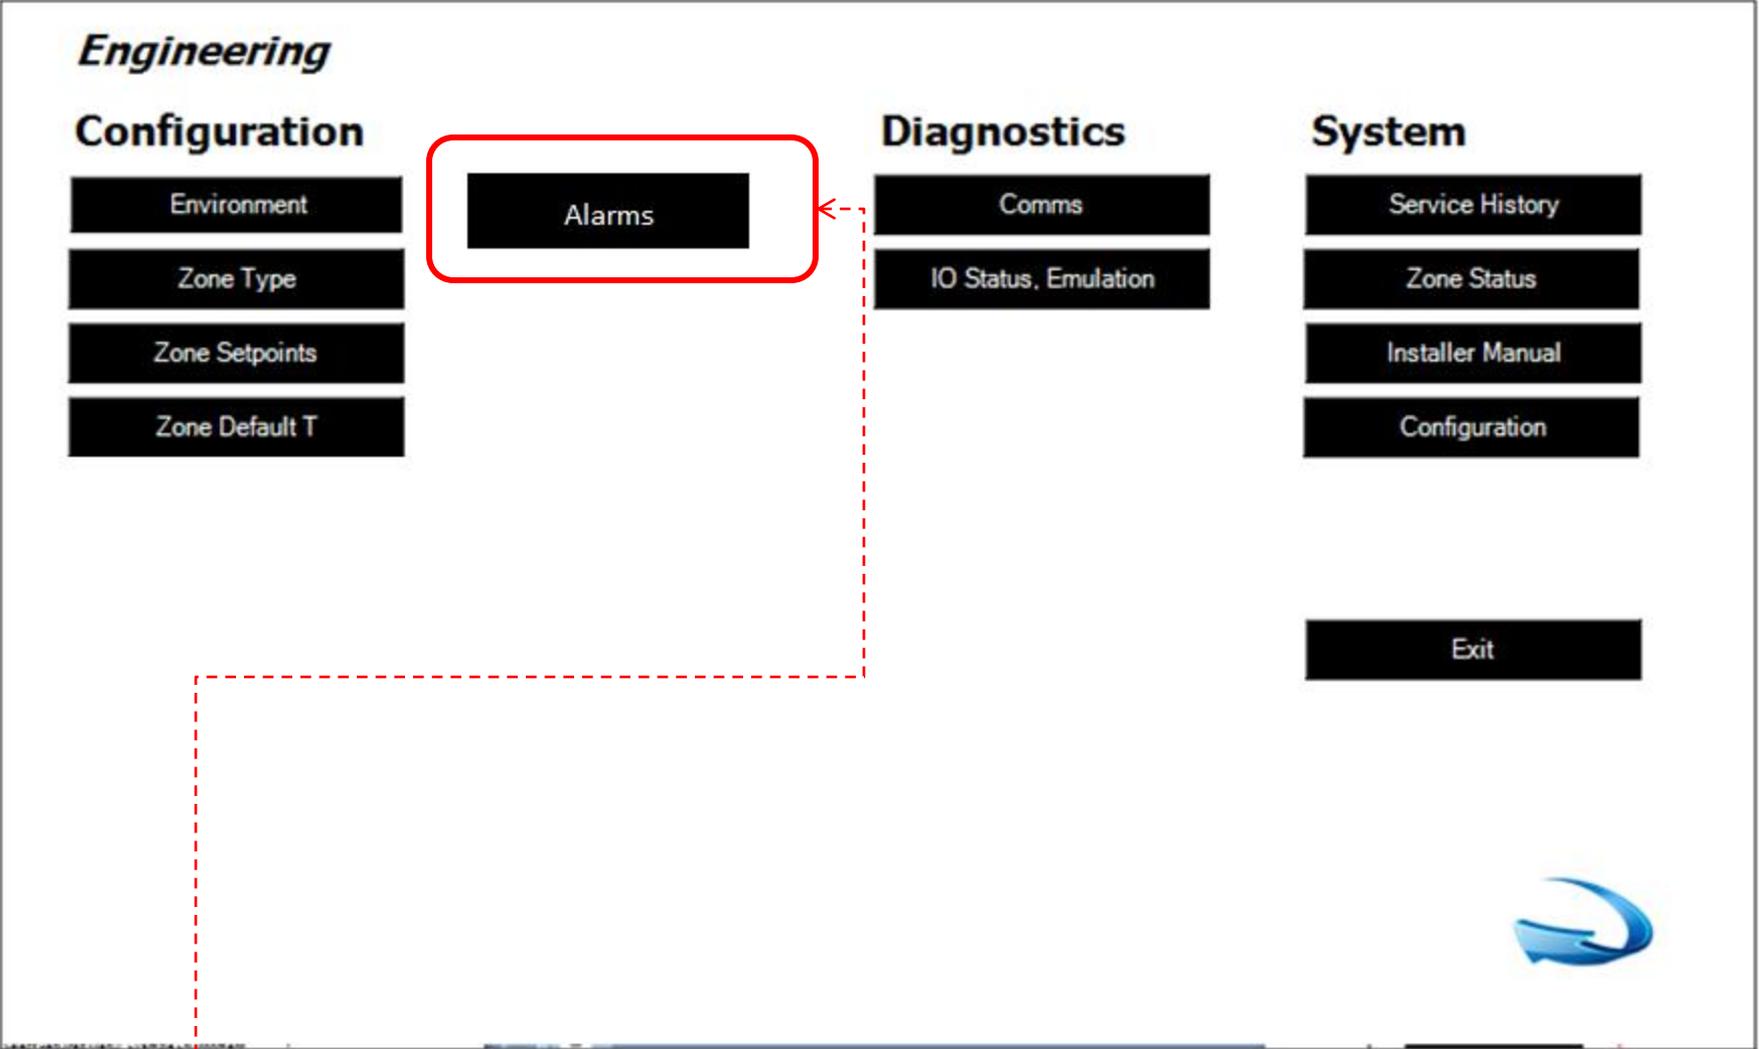

Alarms

Overview

This software module enables specific Alarm messages to be displayed on the Home Screen of the Console: Alarm message appear in Red Text.

Operation


- Enter Text of the message in the field provided.
- Select input
- Open Circuit = Alarm Message Displayed
- Short Circuit = No Message

Multiple Messages :

If several messages trigger, they will be sequentially display on the home screen

Maximum

Maximum of 8 Available Alarms

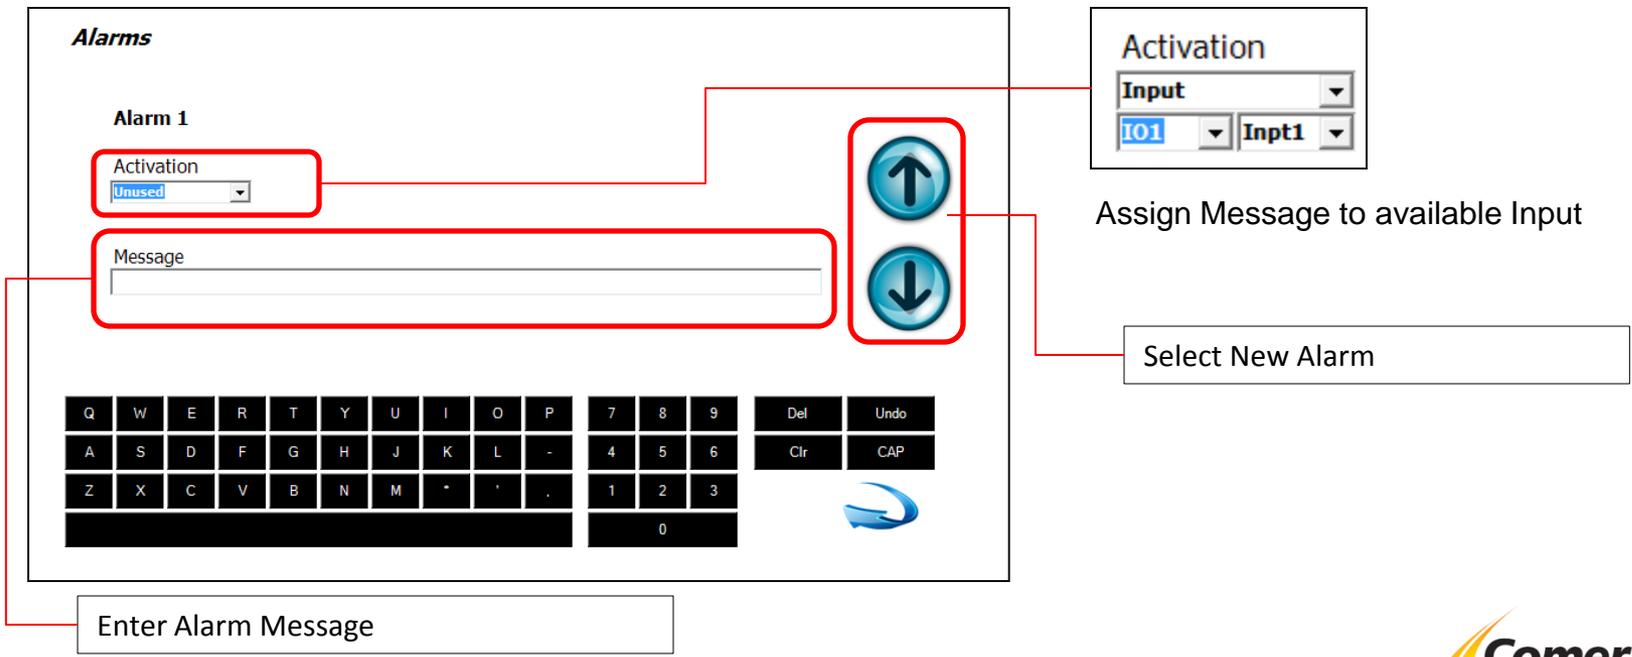

Alarm Message Displayed

Alarm message appear in Red Text o at bottom right of screen

The screenshot displays a control panel interface with a dark left sidebar and a blue main area. The sidebar contains the following text and icons:

- Status
Mode: Schedule
Schedule: Winter
DHW: Not in System
- Alarm**
Boiler Lockout (highlighted in red)
- System (house icon), Vacation (calendar icon)
- Help (book icon), Setup (key icon)

The main blue area is divided into two sections:

- Master**: Contains 'Mode' (power button icon) and 'Schedule' (clock icon).
- Zone**: Contains 'Set-Point' (thermometer icon) and 'DHW' (faucet icon).

A blue arrow points from the 'Alarm Boiler Lockout' text in the sidebar to a dashed box at the bottom of the slide. The dashed box contains the text: **Alarm Message(s) Displayed**. The number '5' is located to the left of this dashed box.