

# Module Extend Drop Down List

## Set up on Touch Screen

### Engineering Manual

#### Ver 18.06.1-55

Title Page

© 2003 Comeragh Controls Ltd

No part of this document may be reproduced by any process without the prior written permission from Comeragh Controls Ltd.

The information in this document is provided for reference only. While every effort has been made to make sure it is accurate and complete, Comeragh Controls Ltd does not accept any liability arising out of the application or use of the information or products described herein. Moreover, Comeragh Controls Ltd reserves the right to alter specifications or procedures without notice.

This document may contain or refer to information or products protected by copyright or patents and does not convey any license under the patent rights of Comeragh Controls Ltd nor the rights of others.

All products referred herein are trademarks of their respective owners.

**Publication details:**

*Title:* iCon Touch Screen User Manual

*Part Number:* CC-M-ED

**Produced by:**

Product Support Department


Comeragh Controls Ltd

Upper Irish Town


Clonmel

Co. Tipperary

# Extend Drop Down List - Overview

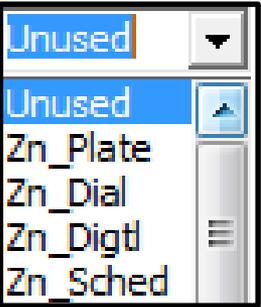


Standard List

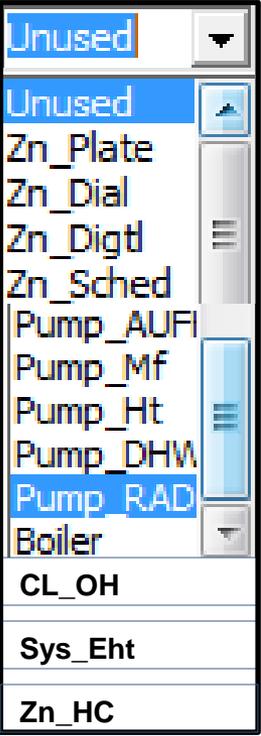

Extended List

**Overview:**  
Relay 1-8 will now have the Extend Drop Down List

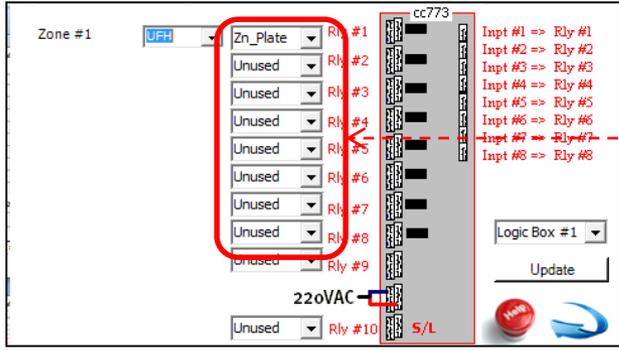

- Pump AUFH: (All Ufh) Active when any **ufh or uProbe** is calling (On any I/O) **Zone Type: ufh & uProbe**
- Pump Mf: Manifold Pump - Active when any ufh or uProbe is calling only on it's I/O
- Pump Ht: Active when any **Ht Zone** calling (On any I/O) **Zone Type: ufh / uProbe / Rad / Probe**
- Pump DHW: Active when any **Ht & DHW** Zone calling (On any I/O)
- Pump Rad : Active when any **Rad Zone** calling (On any I/O) **Zone Type: Rad / Probe**
- Boiler: Active when any DHW is calling
- CL\_OH Active when any Cooling calling, override all zones calling for Heating (CL job only)
- Sys\_Eht Active when any Electric ufh Zone is calling anywhere is the system
- Zn\_HC Active when a Zone Ht or Cool- Override Ht Zone on this Manifold) (Ref Digital Sensors Only)

**Note: Time ON / OFF delays**  
**Any relay assigned as either a Pump or Boiler will have the following time delay & overrun**


- Pumps 2 min ON delay & 1 min (OFF) overrun delay
- Boiler 3 min ON delay

# Steps to enable Extend Drop Down List


## Step 1: Access Eng – Install Advanced




Step 1. Press Help

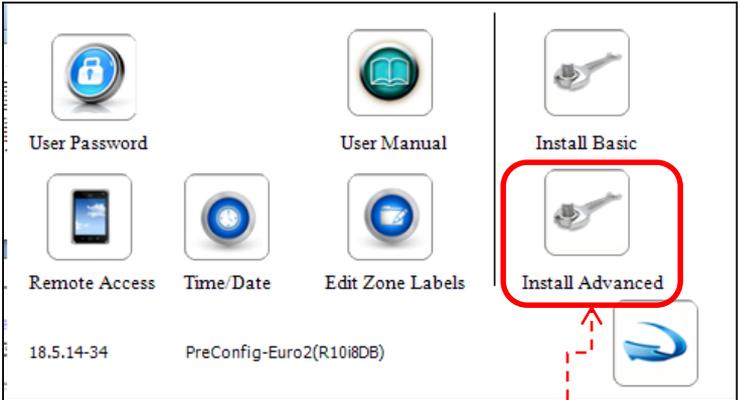

Step 2. Press - Install Advanced

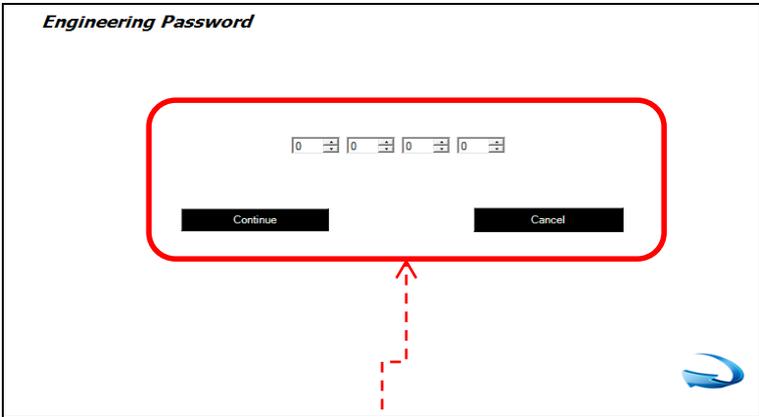

3. Enter Code 3105 & Continue

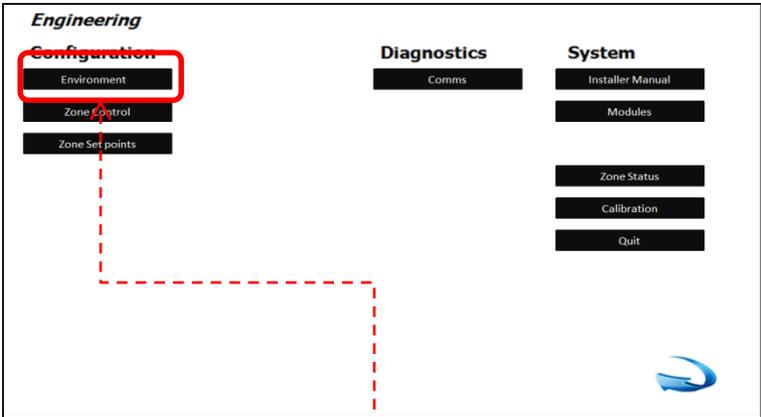

Step 4. Press Envornment

# Step 2: Check Box in Environment cc200(7" Touch Screen)

**Environment**

**Password** Eng 3 1 0 6  Enable Installer 0 0 0 0  Enable User Password

Payment 0 0 0 0  Enable

---

**Heating** SP (°C) Max, Min 30 16

**Cooling** UFH SB (°C) Max Min 8 3 Frost Protection(°C) 5

Probe SP(°C) Max 99  Enable Extended List In Basic Install

---

**DHW** SP Max (°C) 70 Legionella Saturday (70°C) 4AM 1 Hour Hys(°C) 4

---

**Sensor OffLine** Heating/Cooling Zones  Force OFF  Follow Req State  
DHW Zones  Force OFF  Follow Req State

---

**Schedule** Type  7 Day  5/2 Day  24 Hour  Single Set-Point

---



**Home Screen** Background 0 Service Due January  Enable  Unserviced

---

**Network** Max Zones 32 Max I/O 8 Port 2  Enable  

**Enable Extended List In Basic Install**  
Enable more option sin basic Install drop down lists  
(This module must be roqueted when order units)

# Step 2: Check Box in Environment cc245 (4.3" Touch Screen)

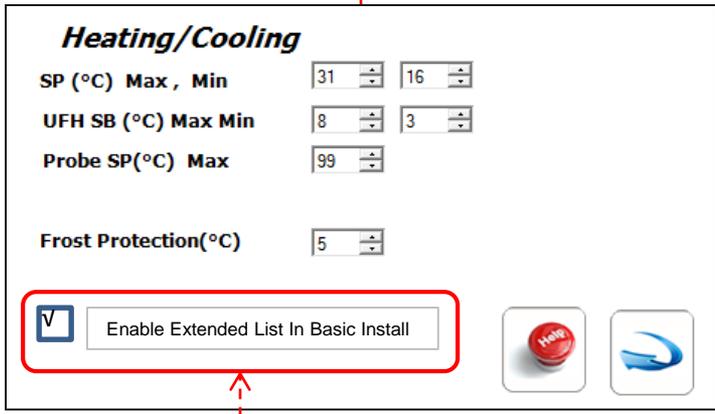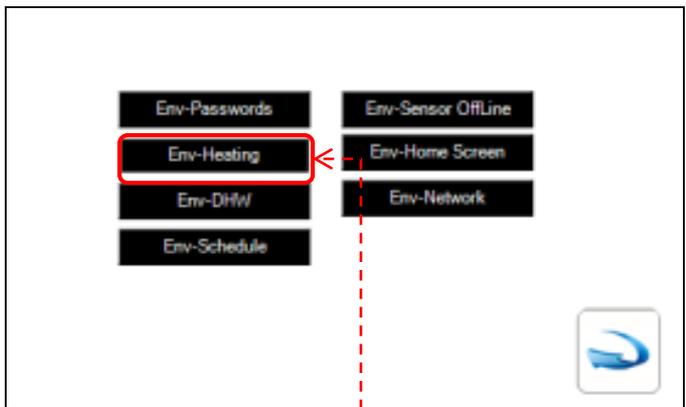

**Enable Extended List In Basic Install**  
Enable more option sin basic Install drop down lists  
(This module must be roqueted when order units)