

Port Forwarding Example On BT Voyager 2110 Router

Step 1: Access your BT Voyager 2110 Router via web browser

1) Open up a web browser.

In the address line of your browser type in “http://voyager.home”, then press Enter.

If this doesn't take you to the router's web page, try typing in “http://192.168.1.1” instead.

Step 2: Enter user name and password



The router's Quick Start screen will appear in the browser window.

Type in your Broadband username and your password.


If you do not know your user name and password contact your service provider

Step 3: Select Advanced



If password and user name are requested: use “admin” for both .
Failing this contact your service provider


Step 4: Select Virtual Server

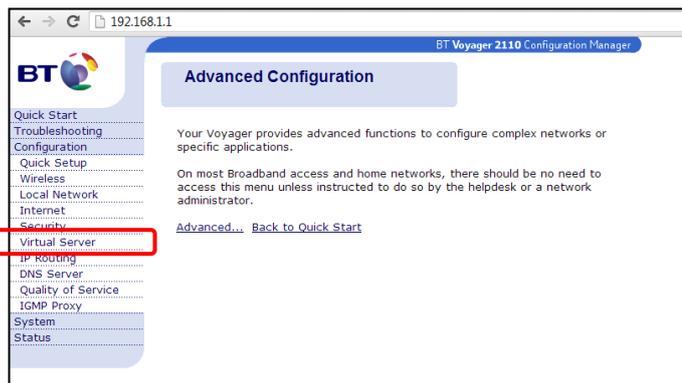

Step 5: Select Port Forwarding



Step 6: Select Add

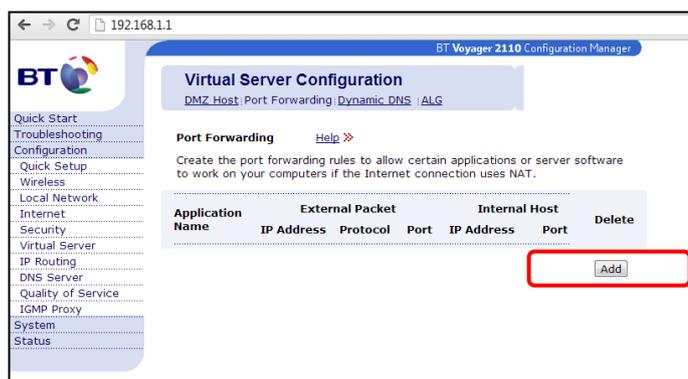

Step 7: Enter required fields

BT Voyager 2110 Configuration Manager

Port Forwarding

Add New Port Forwarding Rule

Application Name:

Pre-defined: Audio/Video | Camerades

User defined: Heating Controls

From Internet Host IP Address: ALL

Forward to Internal Host IP Address: 192.168.1.9

By using the rules:

Protocol	External Packet Port Start	External Packet Port End	Forward to Internal Host Port Start	Forward to Internal Host Port End
TCP	80	80	80	80
TCP				
TCP				

< Back Apply

Note:
Ensure Touch Screen is attached to Router via network Cable

Application:

- Select : User Defined
- Enter name e.g. Heating Console

Forwarding

- At the Touch Screen
Press: Help
Press Remote Access
The DHCP IP address is displayed
e.g. 192.168.1.9
- Enter this IP address here

By Using the Rules

- At the Touch Screen
Press: Help
Press Remote Access
The Dynamic allocated IP
address is displayed
e.g. 192.168.1.9
- Enter this IP address here

**Press: “Apply” to save
Close web browser**