

# Remote Access

## Set Up on cc200 Touch Screen

### Ver 18.06.0-53

Title Page

© 2003 Comeragh Controls Ltd

No part of this document may be reproduced by any process without the prior written permission from Comeragh Controls Ltd.

The information in this document is provided for reference only. While every effort has been made to make sure it is accurate and complete, Comeragh Controls Ltd does not accept any liability arising out of the application or use of the information or products described herein. Moreover, Comeragh Controls Ltd reserves the right to alter specifications or procedures without notice.

This document may contain or refer to information or products protected by copyright or patents and does not convey any license under the patent rights of Comeragh Controls Ltd nor the rights of others.

All products referred herein are trademarks of their respective owners.

**Publication details:**

*Title:* iCon Touch Screen User Manual

*Part Number:* CC-200RA

**Produced by:**

Product Support Department

Comeragh Controls Ltd

Upper Irish Town

Clonmel

Co. Tipperary


# 1. Access Engineering Menu



Step 1. Press Setup



Step 2. Press - Install Advanced

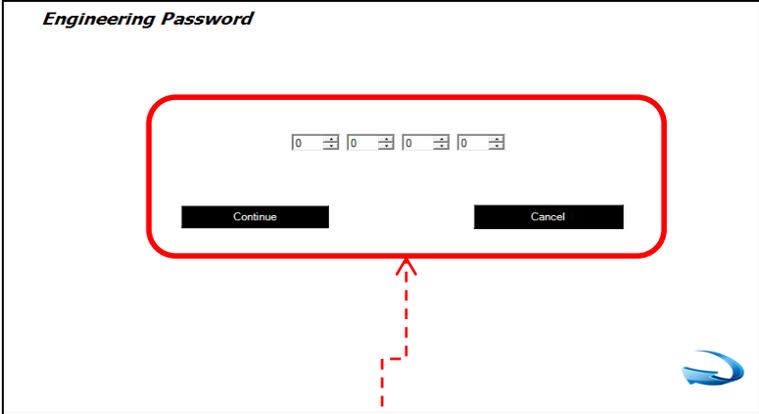


3. Enter code 3105 & Press Continue

## 2. Engineering Menu – Remote Access

The screenshot shows the 'Engineering' menu with three main sections: Configuration, Diagnostics, and System. The Configuration section contains buttons for Environment, Zone Type, Zone Setpoints, and Zone Default T. The Diagnostics section contains buttons for Comms and IO Status, Emulation. The System section contains buttons for Service History, Zone Status, Installer Manual, Configuration, and Exit. A 'Remote Access' button is located at the bottom left, highlighted with a red rounded rectangle. A dashed red arrow points from this button to a callout box below the screen.

Select : Remote Access

# 3. Remote Access

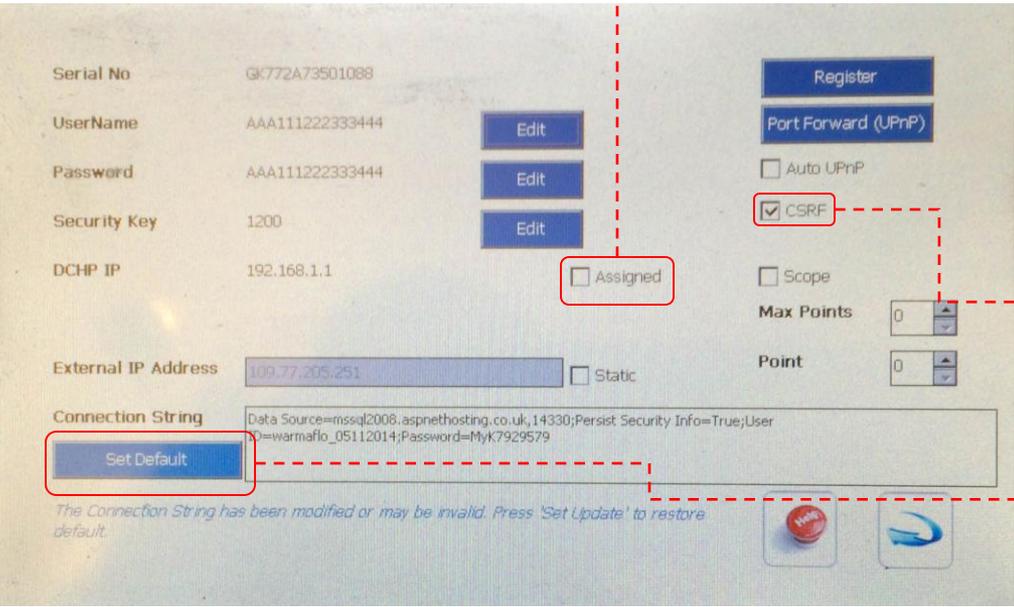

**Assigned v Checked**  
 Enter the IP address which has be manually set in the router

192.168.1.1  Assigned  
 (DCHP IP Address is used in port forwarding)

DCHP Scope: 192 168 1 1

**Additional Security**  
 Select CSRF (Cross-Site Request Forgery)

**Select Default**  
 This will only appear if the Installer ID Code does not match the relevant cloud server remote access address. Press "Select Default" System will read the Installer ID code and automatically assign the relevant cloud server remote access address

**Overview:**

<u>Item</u>	<u>Description</u>
Serial Number:	This is preprogrammed in factory
User Name:	End User preferred User Name e.g. JohnSmith1234
Password:	End User preferred Password e.g. Apple12345678 (Password must be at least 12 characters and contain at least one upper case character and at least one number) (Can be access and changed later by end user under HELP -Remote Access)
Security Key	Enter any code greater that 0001
DCHP IP Address	Assigned <input type="checkbox"/> NOT Check      Automatically assign the IP address from your router Assigned <input checked="" type="checkbox"/> Checked      Enter the IP address which has be manually set in the router
DCHP IP Scope	Adjust the scope rate if your router only allocated IP address within a specify range (Use in port forwarding)
External IP Address	This IP address will be automatically assign when you attach Touch Screen to your router.
Connecting String:	Address of cloud server If "Select Default Button Appears then - Press "Select Default" System will read the Installer ID code and automatically assign the relevant cloud server remote access address
Press:	REGISTER