


iCon[®] cc764 Quick Reference



Sensor Operation

Sensor Display

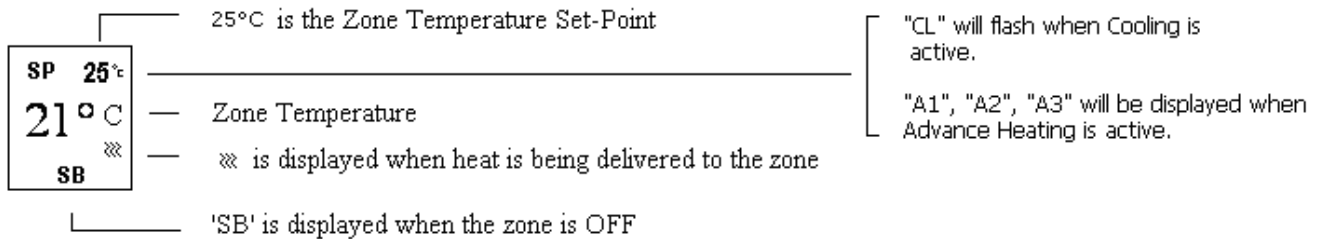

To Change the Zone

MODE

and

Temp




To INCREASE the temperature in the zone

To DECREASE the temperature in the Zone

Temperature changes at the sensor remains in effect until the scheduler changes the zone state from ON to OFF or, OFF to ON.

To OVERRIDE the programmed sensor (TIMER, STOP & DISABLE) State

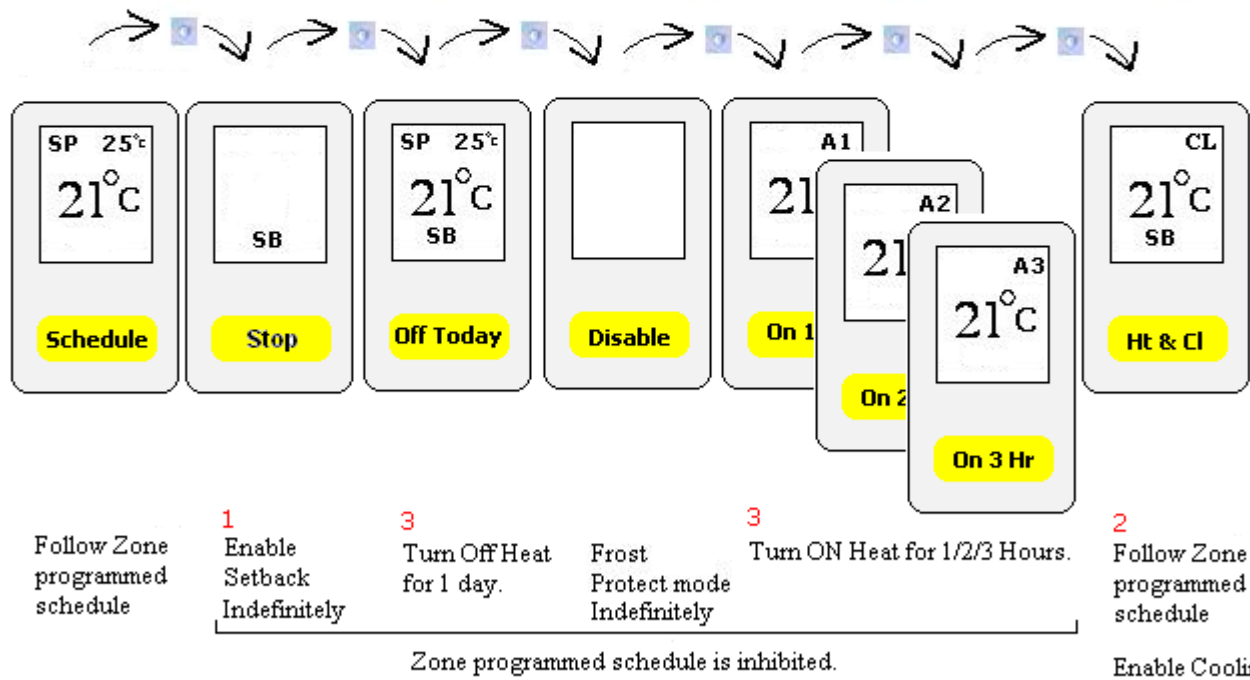

- 1 Only applies to UFH type zone
- 2 Does not apply to DHW type zone
- 3 Only applies to Radiator, DHW or Sched type zones