

iCon cc200HV3 (7") Touch Screen User Manual Ver 19.1.172

Title Page

© 2003 Comeragh Controls Ltd

No part of this document may be reproduced by any process without the prior written permission from Comeragh Controls Ltd.

The information in this document is provided for reference only. While every effort has been made to make sure it is accurate and complete, Comeragh Controls Ltd does not accept any liability arising out of the application or use of the information or products described herein. Moreover, Comeragh Controls Ltd reserves the right to alter specifications or procedures without notice.

This document may contain or refer to information or products protected by copyright or patents and does not convey any license under the patent rights of Comeragh Controls Ltd nor the rights of others.

All products referred herein are trademarks of their respective owners.

Publication details:

Title: iCon Touch Screen User Manual

Issue Date: 24.6.19

Part Number: CC-200HV3TS

Produced by:

Product Support Department

Comeragh Controls Ltd

Upper Irish Town

Clonmel

Co. Tipperary

1. Temperature

1. How do I adjust the temperature at sensor
2. How do I adjust the temperature at console
3. How do I use the buttons on the sensor
4. Sensor Symbols Explained
5. What does Set Back temperature mean
6. Temporary & Scheduled Temperature Setting

2. Scheduling

1. How do I schedule a room to heat
2. How can I add different times to a room schedule
3. Can I have a different schedule for each day of the week
4. Is there a quick default schedule setting I can use
5. Can I copy a room schedule into another room
6. Can I copy today's room schedule into another day of the week

3. Advanced Room Settings

1. Can I switch a room to a different state, without adjusting all my schedules
2. How can I take advantage of low tariff energy rates.
3. Can I set a room to switch on early, so it achieves a desired temperature at a set time
4. Can I Lock Out the Buttons on my sensors
5. Cooling (If applicable)
6. Cooling - Fan Speed (Stop Auto- Set Manually)
7. How can I set a Night Time Cooling Max Limiter Schedule

4. Hot Water


1. Can I adjust the temperature of my Hot Water
2. How can I schedule my Hot Water.
3. Is there a handy Boost to switch on my Hot Water for a short period

- 5. **Holiday**
 - How do I set the holiday setting
- 6. **Whole House Master Setting**
 - 1. Can I switch the whole house to different setting
- 7. **Quick View**
 - Can I look at all room temperatures together
- 8. **Historical Log**
 - Where can I view heating energy use for each room
- 9. **User Manuals**
 - Where can I find the User Manuals
- 10. **Master Clock**
 - How can I adjust the Master Clock
- 11. **Room Names**
 - How can I edit the Room Names
- 12. **Engineering Assess**
 - What is Engineering Assess
- 13. **Exit**
 - How do I get back to the home screen

1. Temperature

1. How do I adjust the temperature at Sensor


Press + & – buttons to adjust the room SP (Set Point)

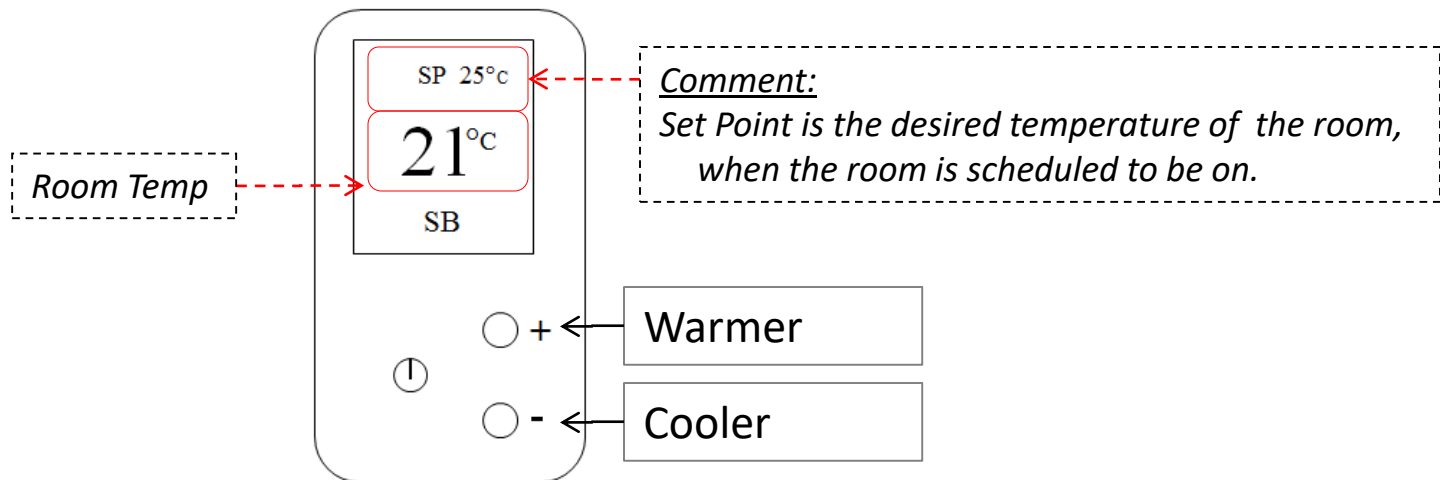



1. Temperature

2. How do I adjust the temperature at console

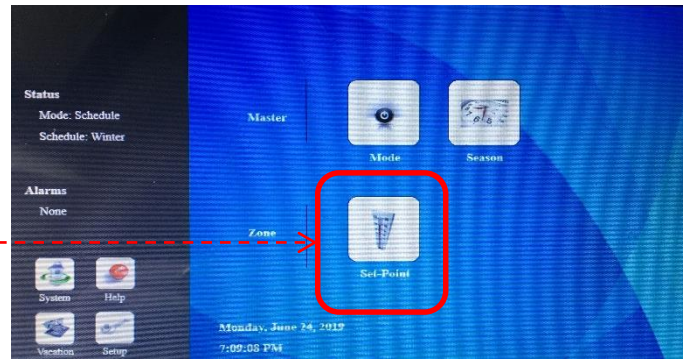1. Press – Zone Settings





2. Use   arrows to find which room you require



Group View:



1. Press – System

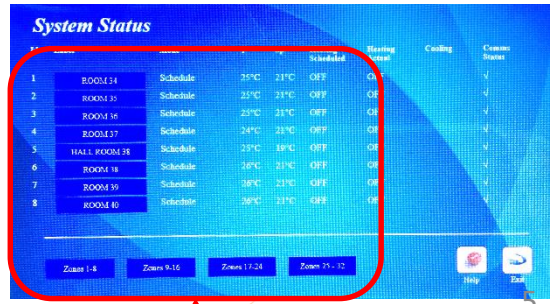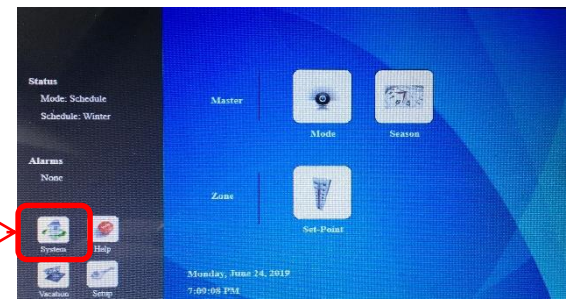2. Press – Zone




1, Temperature

2. How do I adjust the temperature at Console

Use   to adjust the room Set Point

Comment:
Set Point is the desired temperature, when the room is scheduled to be on.


Comment:
Actual room temperature

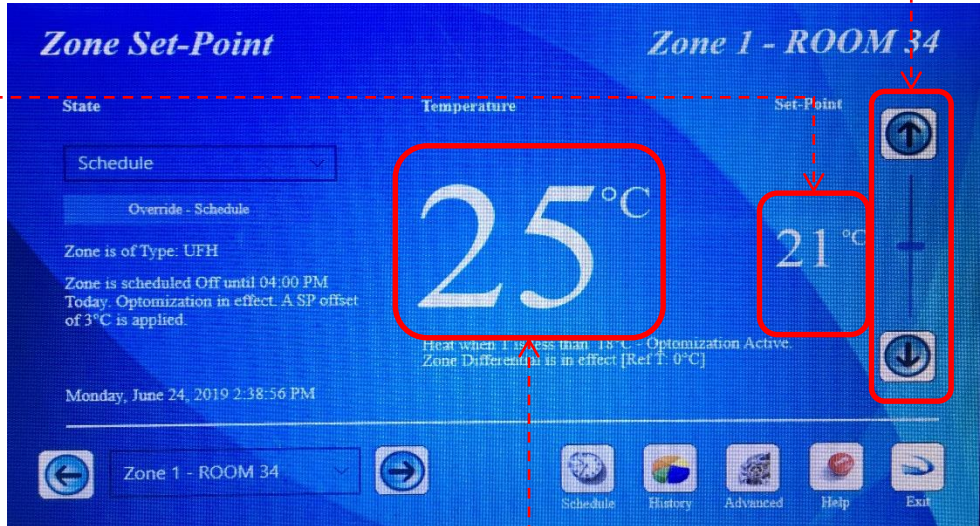


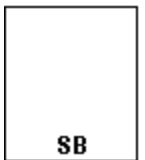
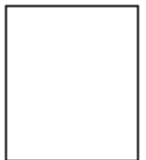
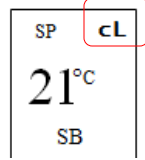
1. Temperature

3. How do I use the buttons on the sensor

Press + & - buttons to adjust the room SP (Set Point)

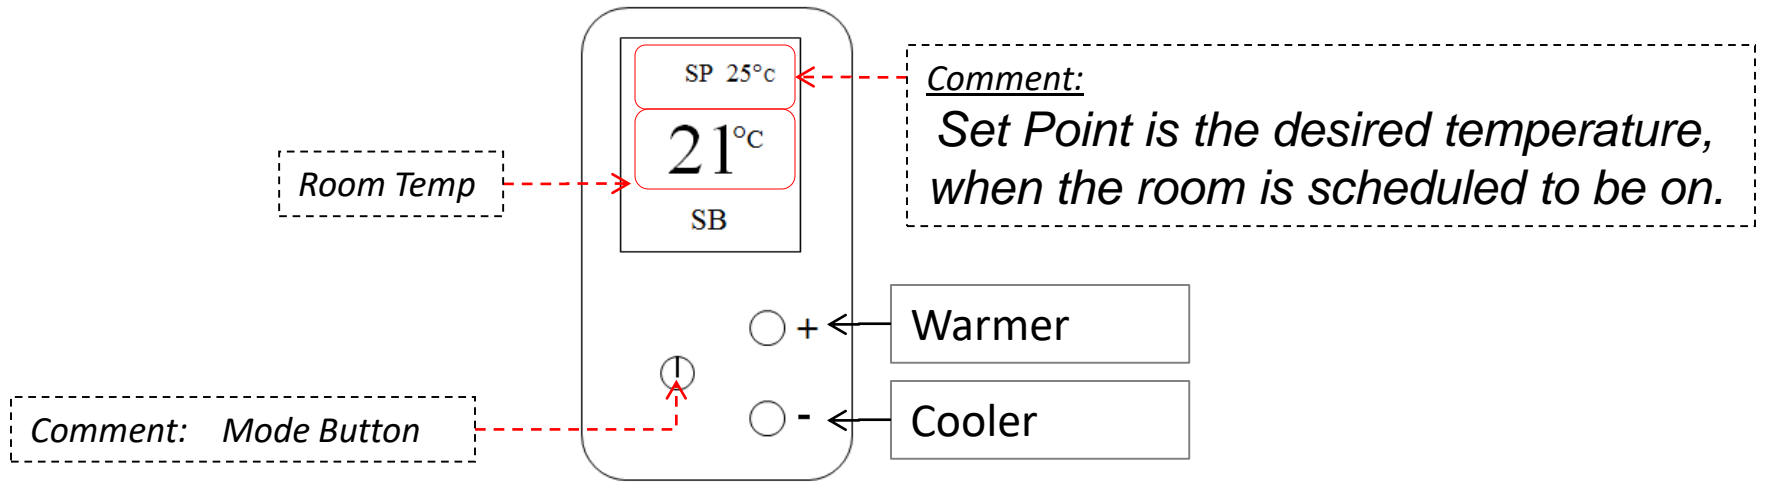


Zones Status

<p><i>Timer :</i></p>  <p><i>Room follows Timer schedule</i></p>	<p><i>Stop:</i></p>  <p><i>Room Ignores schedule Stay in Set Back</i></p>	<p><i>Disable</i></p>  <p><i>Room Ignores schedule Stay in Frost Protection</i></p>	<p><i>Cooling</i></p>  <p><i>Cooling Enabled Only displayed when cooling setup in building</i></p>
---	---	---	--

1. Temperature

4.1 Sensor Symbols

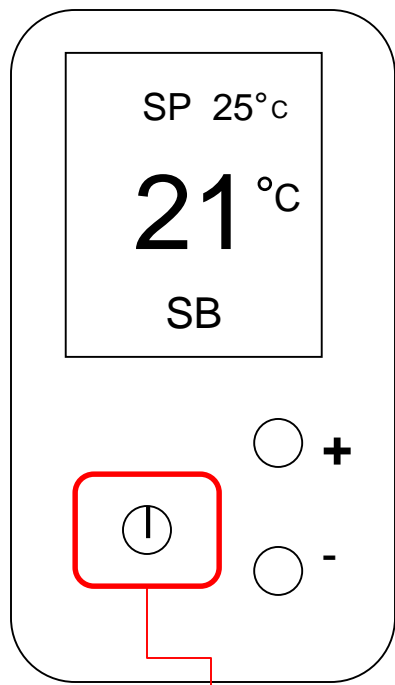

Use mode Button to select setting

Sc

Schedule Heating

Sb

Stop Set Back Indefinitely

Disable Frost Protect Indefinitely

cL

Cooling Scheduled Heating Cooling Enabled

td
OF

OFF for Today

IH
On

ON For 1 Hr

2H
On

ON For 2 Hr

3H
On

ON For 3 Hr

-5

Cannot read Probe

E
16
E
F
r
t


Ref Only

01
ZN

Lost Comms

1. Temperature

4.2 Sensor Symbols Explained

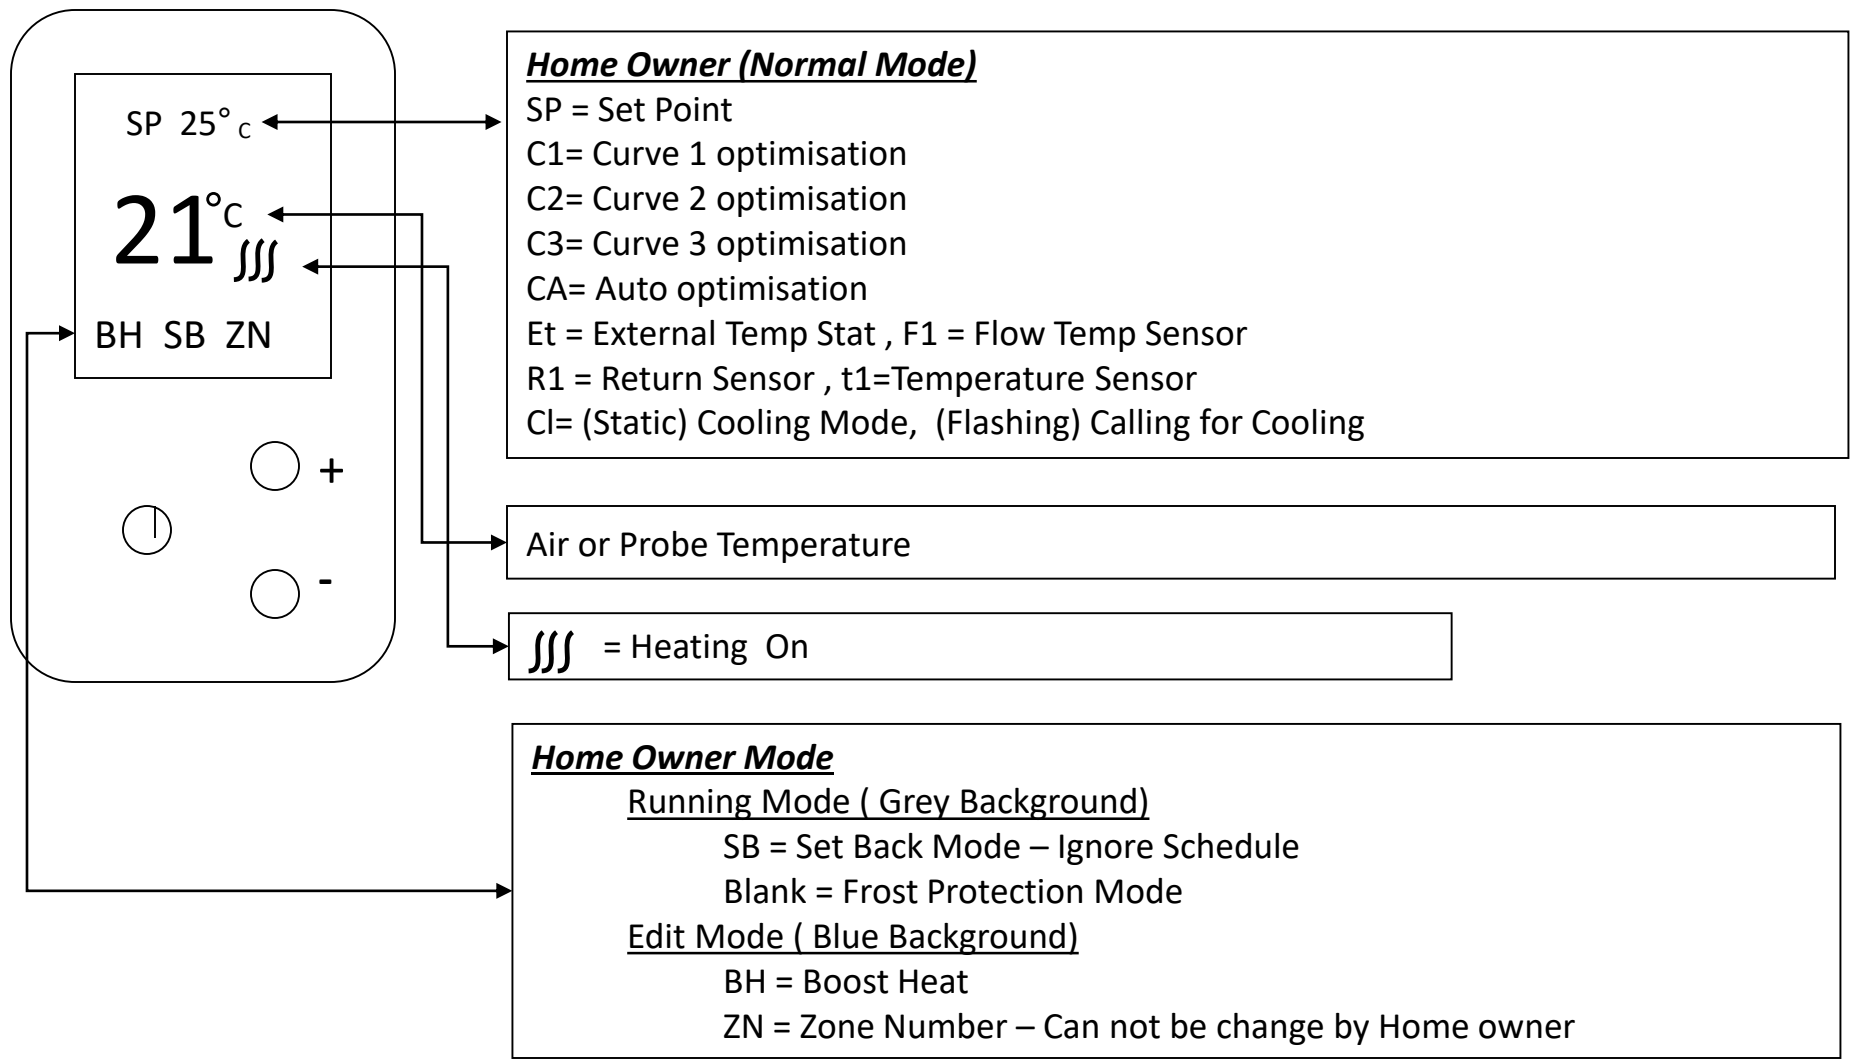

Note:
Although cooling can be enabled, it will only operate where there is a cooling system/device installed


1. Temperature

5. What does Set Back temperature mean

Set Back is the temperature the room will not fall below when room is OFF.


Comment:

Time OFF :

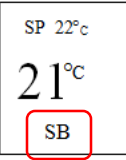

Room OFF
SB (Set Back) Displayed at bottom on
Room Only heat if room temp fall below SB

Time ON :




Room ON
SB (Set Back) REMOVED
Room heats to the SP (Set Point) Temp

1. Temperature

5. Temporary & Scheduled Temperature Setting

Temporary - Temperature Setting

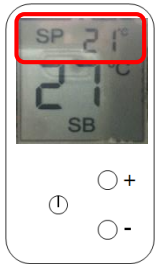


At Sensor



At Console
Set Point Screen

Scheduled - Temperature Setting

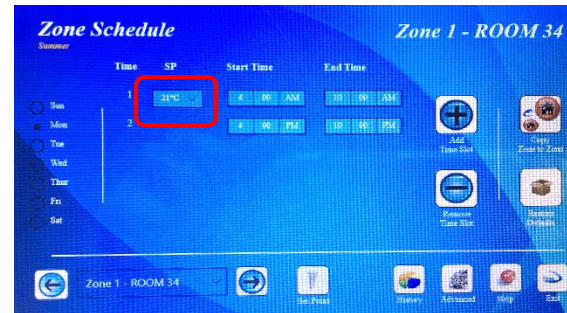

At Console
Schedule Screen

Comment:

Temporary Temperature Setting only remain until the next scheduled timed ON/OFF heating event.
i.e. If you adjust the SP (Set-Point) up to 28°C, at the next scheduled ON / OFF, the system will automatically reverts back to the scheduled SP e.g. 21°C. This ensures the running cost are kept low .

When does the system switch to Schedule


- ❖ At the next Scheduled Change Over
- ❖ If the user adjust a setting in the Scheduled Screen
- ❖ If the master Time / Date setting for the console is adjusted

Note:

If the system is not adjusted, the system will always use the next schedule on time SP as it's reference.
This ensure the reheat time are kept constant.

2. Scheduling

1. How do I schedule a room to heat

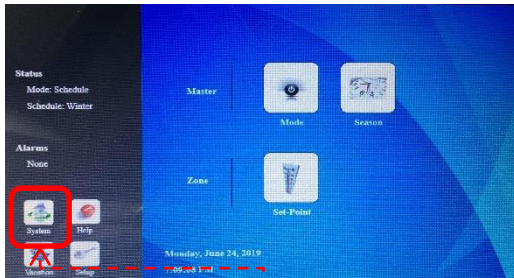

1. Press – System




2. Press Zone Number



3. Use Schedule icon



5. Select Start & Stop Time

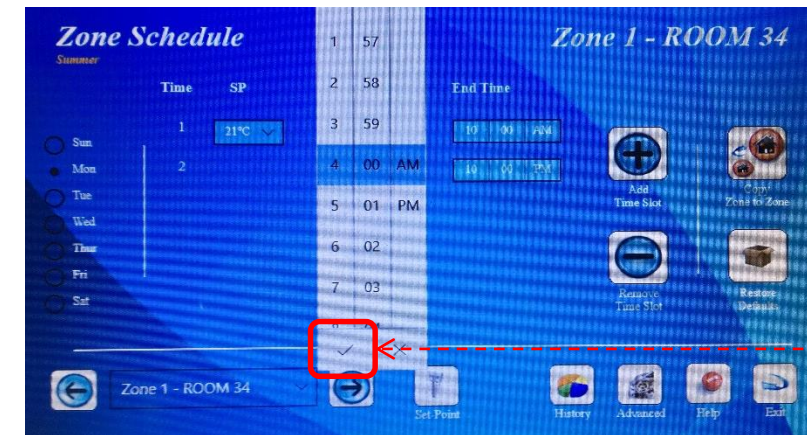

6. Select required time and Press ✓

2. Scheduling

2. How can I add different times to a room schedule

Use the Button highlighted to Add or Remove Times

Maximum 5 Time Slots



2. Scheduling

3. Can I have a different schedule for different days of the week.

1. Select the box beside the day required and enter the new schedule for this day

Zone Schedule
Summer

Zone 1 - ROOM 34

Time	SP	Start Time	End Time
1	21°C	4 00 AM	10 00 AM
2		4 00 PM	10 00 PM

Day Selection: Sun, Mon, Tue, Wed, Thur, Fri, Sat


Buttons: Add Time Slot, Remove Time Slot, Copy Zone to Zone, Restore Defaults

Bottom Bar: Zone 1 - ROOM 34, Set-Point, History, Advanced, Help, Exit


2. Scheduling

4. Is there a quick default schedule setting I can use

1. By pressing these buttons, factory default Time & Temperature settings will be assigned to this room or all rooms

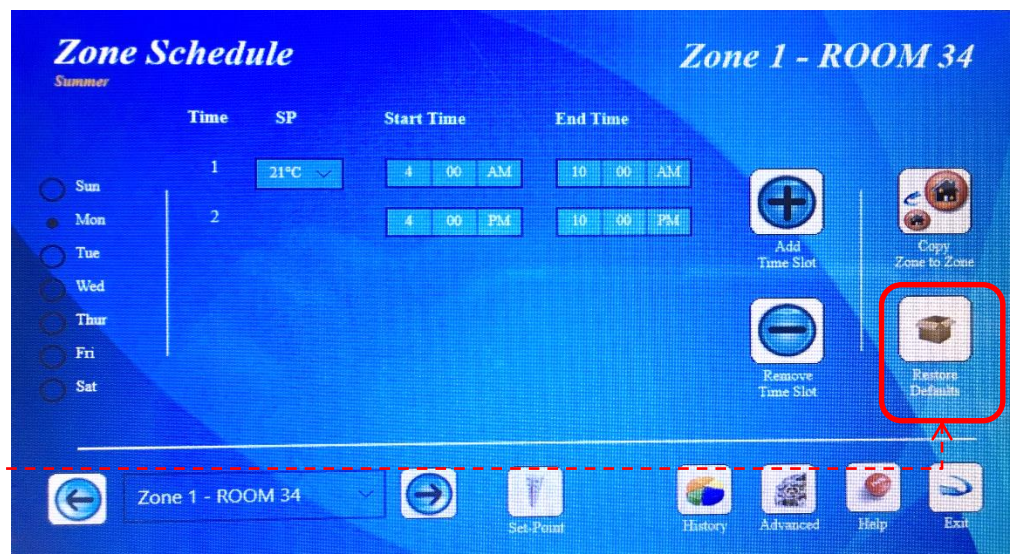


2. Select required days and if required apply to other zones

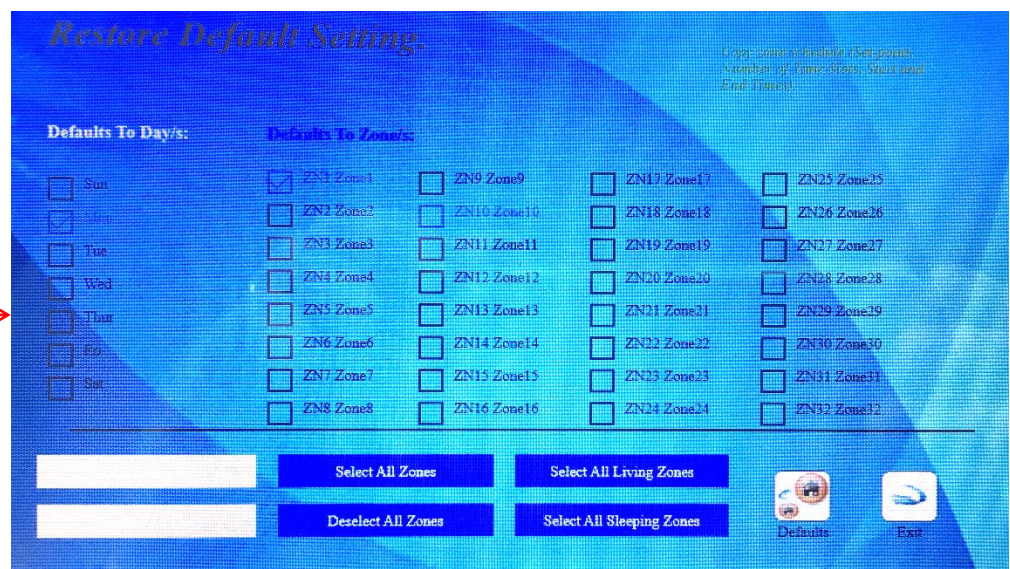

2. Scheduling

4. Can I copy a room schedule into another room

1. By pressing these buttons, you can copy today's room schedule into other day of the week or all days of the week.

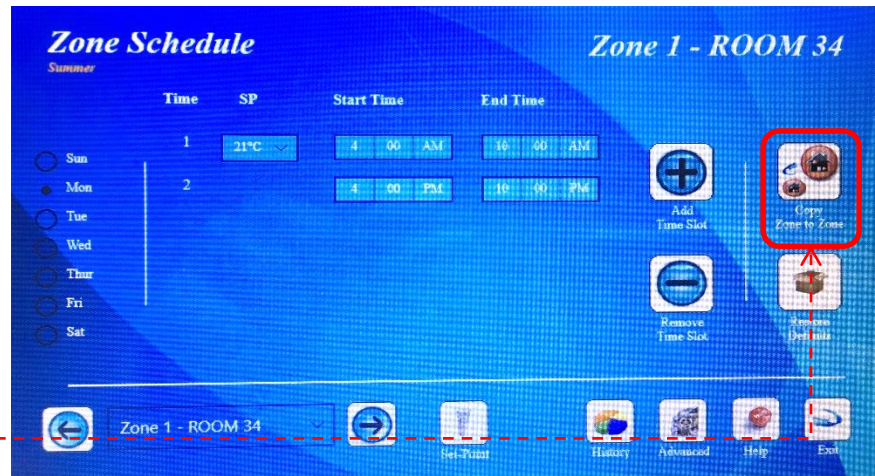

2. Select required days and if required apply to other zones



Comment:

If All Zone Check Box is select, the following will apply

- DHW (Domestic Hot Water) → DHW Type Zone
- Sch (Schedule Only) → Sch Type Zone
- Any Heating Zone (UFH, Uprobe, Rad) → Will copy to Heating All Type Zone
- Probe Zone (Special Zone Temp Range up to 99°C) → Will copy to ONLY Probe Zones

2. Scheduling

6. Can I copy today's room schedule into other day of the week

1. By pressing these buttons, you can copy a room schedule into another room




2. Select required days and if required apply to other zones



2. Scheduling

7. Temporary & Schedule SP

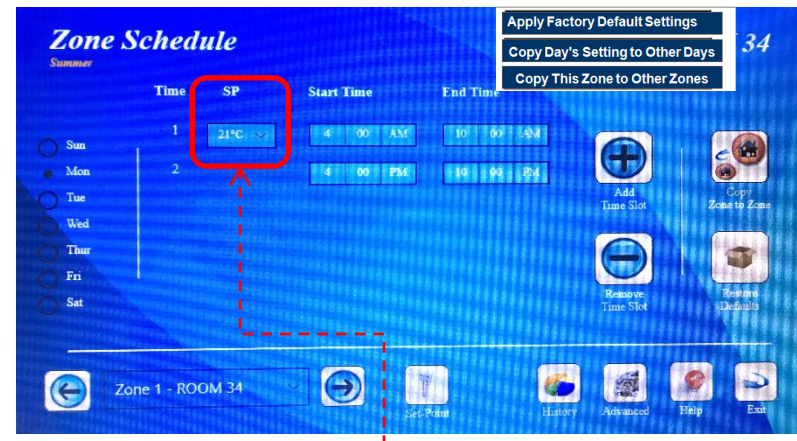


Temporary SP
(Zone Set Point Screen)
Any adjustment to the SP on this screen will only remain until the next scheduled ON/OFF event

Scheduled SP
(Zone Schedule Screen)
Default SP


Note:
If you make any adjustment on this screen, the Temporary SP will automatically be updated, with the scheduled SP

3. Advanced Room Settings

1. Can I switch a room to a different state without adjusting all my schedules

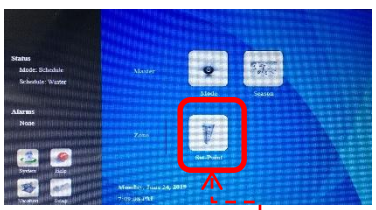

1. Press – Zone Settings

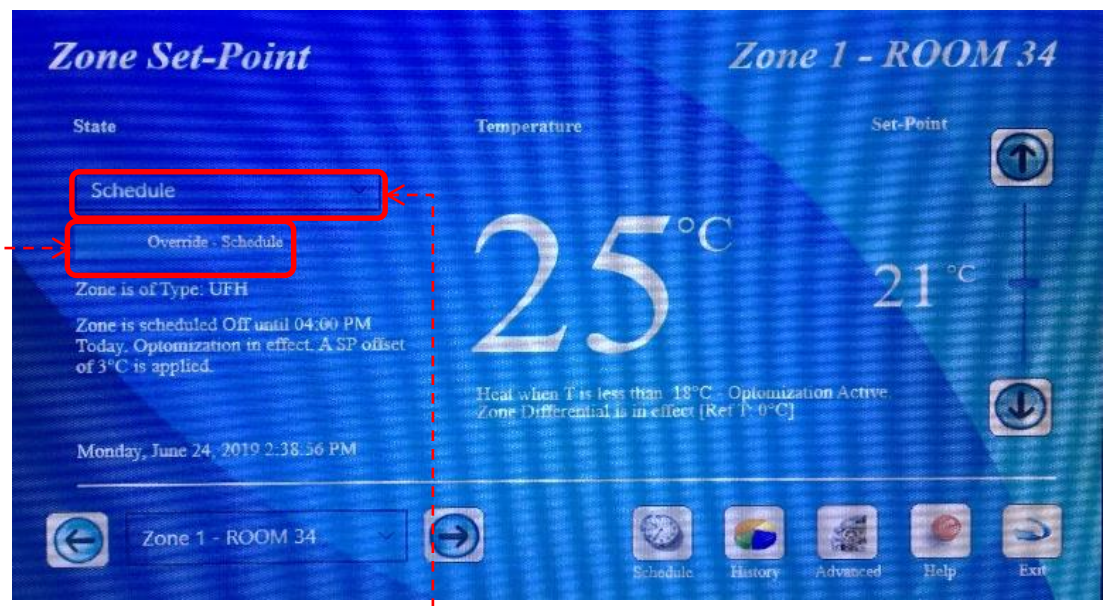

Override

Override the current ON/OFF state to Off/ON until the next scheduled event

State Button

Underfloor Heating

Normal: Zone follows the programmed schedule

Stop: Zone Schedule is suspended
The desired temperature is SP-SB
The Sp for DHW zones is Off

Disable: Zone schedule is suspended
Zone is placed in frost protection mode

Radiators & Hot Water Heating & Sch

Off Today: Off For Today

On 1 Hr: On for 1 Hour

On 2 Hr : On for 2 Hour

On 3 Hr : On for 13Hour


Cool & Sch Heat

Enable Cooling & schedule Heating


Note: Only active if cooling installed.

3. Advanced Room Settings


2. Can I schedule a room to a boost temperature to take advantage of low cost energy

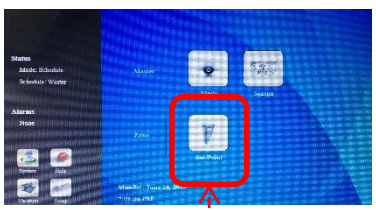

1. Press – Zone Settings

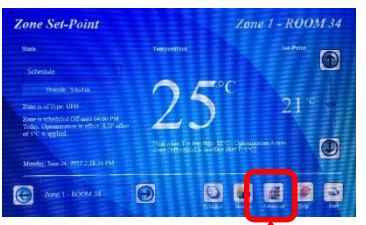


2. Press – Zone Advanced

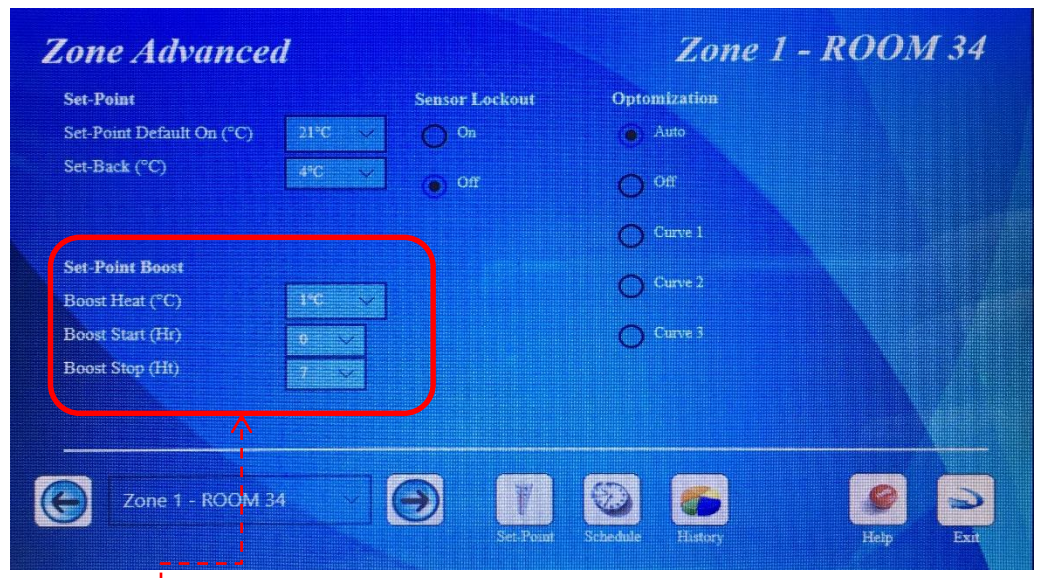

Boost

When a room is scheduled to Boost, the desired temperature = SP (Set Point) + BH (Boost Heat)

Note: Boost must be enabled in Master Schedule

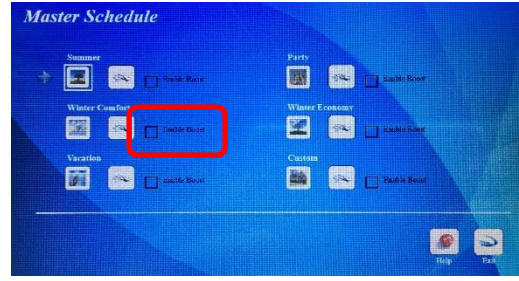


3. Advanced Room Settings

3. Can I set the room to switch on early so it's at a desired temperature at a set time

Optimisation

This is a mechanism of ensuring zone temperatures are achieved according to the programmed schedule.

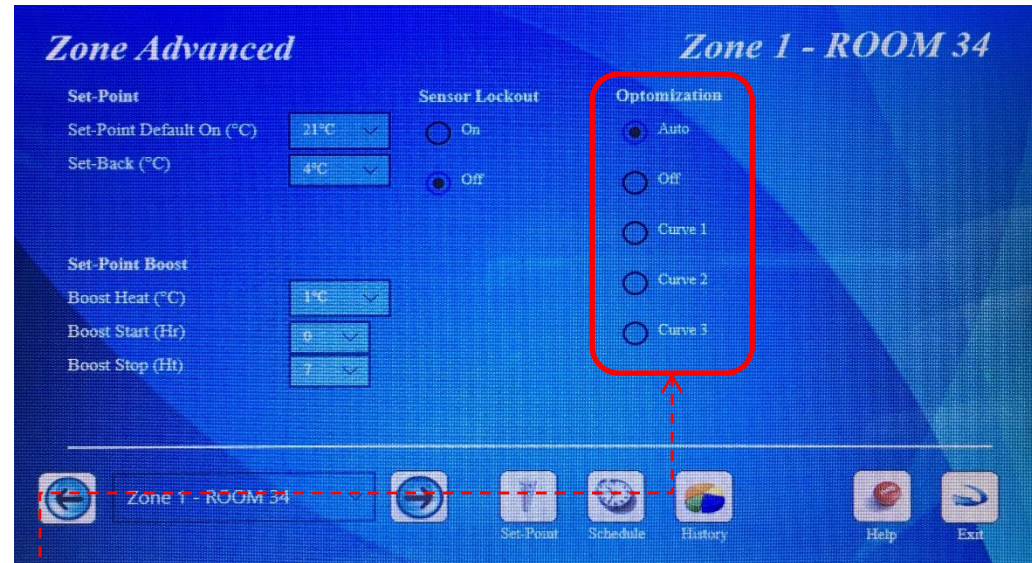

Optimisation

Normal: No optimisation - Follows the timed schedule for the Zone

CRV 1: Preheats Zone **1 Hr** prior to the scheduled ON time
[c1 displayed on sensor when overriding ON time]

CRV 2 Preheats Zone **2 Hr** prior to the scheduled ON time
[c2 displayed on sensor when overriding ON time]

CRV 3 Preheats Zone **3 Hr** prior to the scheduled ON time
[c3 displayed on sensor when overriding ON time]

AUTO This setting will self-learn the thermal inertia of the room and adjust the start time from memory
[cA displayed on sensor when overriding ON time]

3. Advanced Room Settings

3. Can I set the room to switch on early so it's at a desired temperature at a set time

Curve 1		Curve 2		Curve 3	
Time Offset (mins)	Temp Offset (Deg C)	Time Offset (mins)	Temp Offset (Deg C)	Time Offset (mins)	Temp Offset (Deg C)
30	1.0	30	1.0	30	1.0
60	2.0	60	2.0	60	2.0
		90	3.0	90	3.0
		120	4.0	120	4.0
				150	5.0
				180	6.0

Optimization is the control of zone temperature in order to pre-heat according to a selected optimization curve when the zone is in the Timer mode (not Setback or Disable).


An optimization curve controls temperature gradient prior to the scheduled ON time. Curves differ with respect to duration.

Curve Auto Limits


- Max 3 Hr
- Min .5 Hr

3. Advanced Room Settings


4. Can I Lock Out the Buttons on my sensors

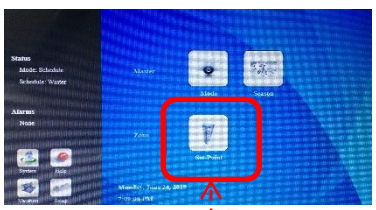

1. Press – Zone Settings

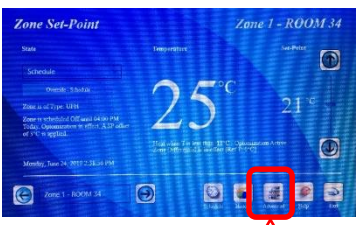


2. Press – Zone Advanced

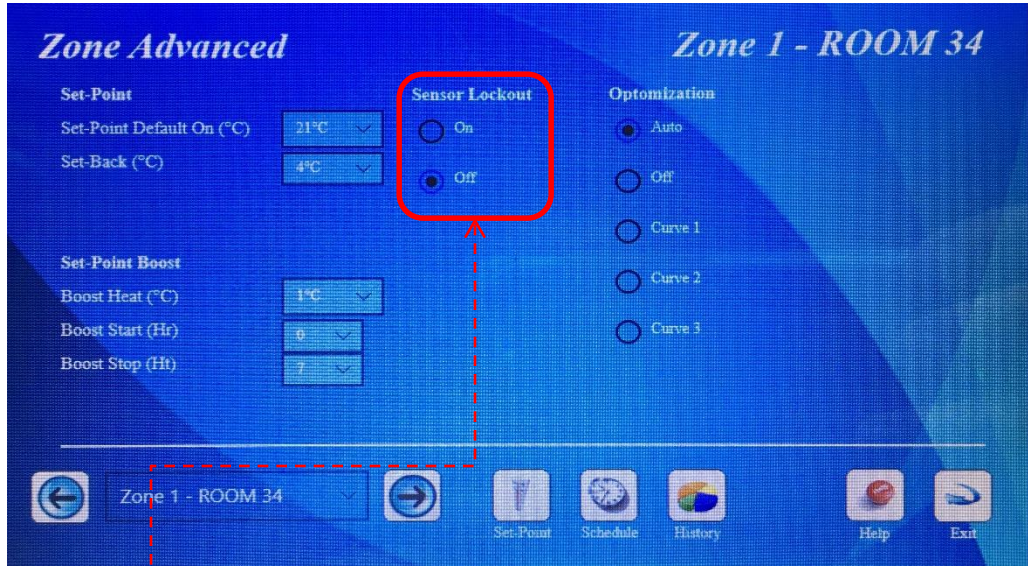

Room Sensor Button Lock Out:
Each individual room sensor buttons can be set to Lock Out, to ensure the occupant cannot change the settings

3. Advanced Room Settings

4. Cooling

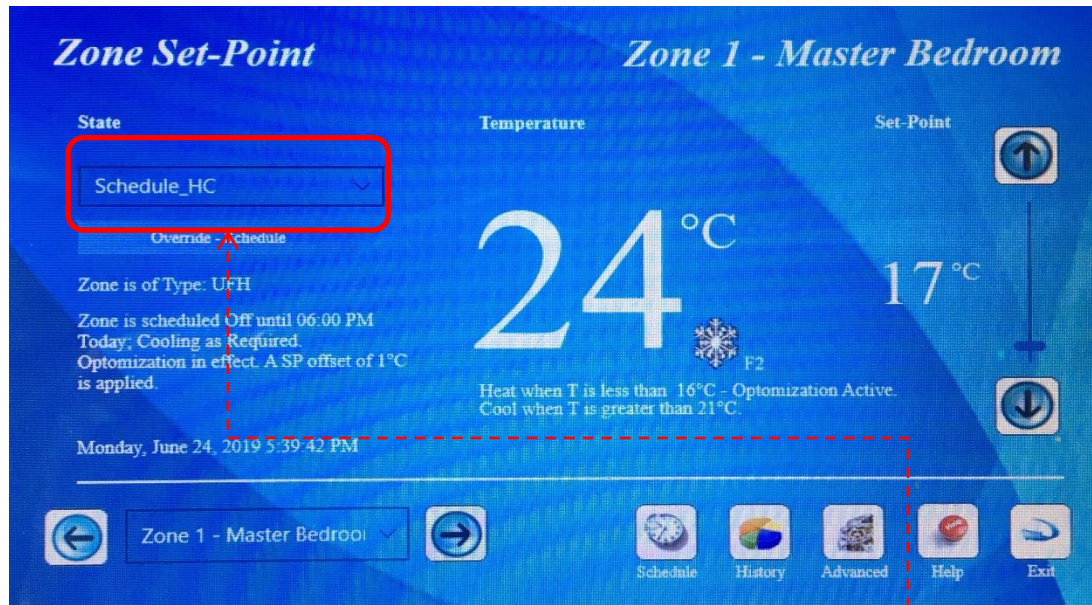

Enabling Cooling:


Press the Stats Button Until "Schedule_HC" is displayed
(Cooling is now enabled.)

Comment:


Cooling will activate if the room temp is above the Set Point +Deadband
Example Set Point +Deadband (21+3=24) Cool when room temp (T) is greater than 24°C

3. Advanced Room Settings


6. Fan Speed (Stop Auto- Set Manually)

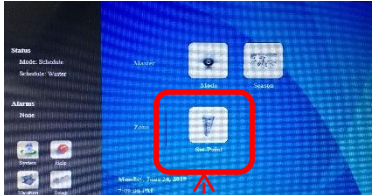

Step 1. Zone Settings

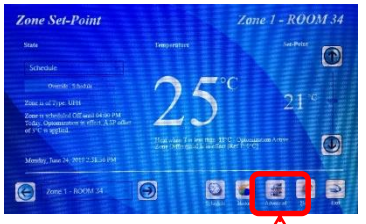

Step 2.- Advance Settings

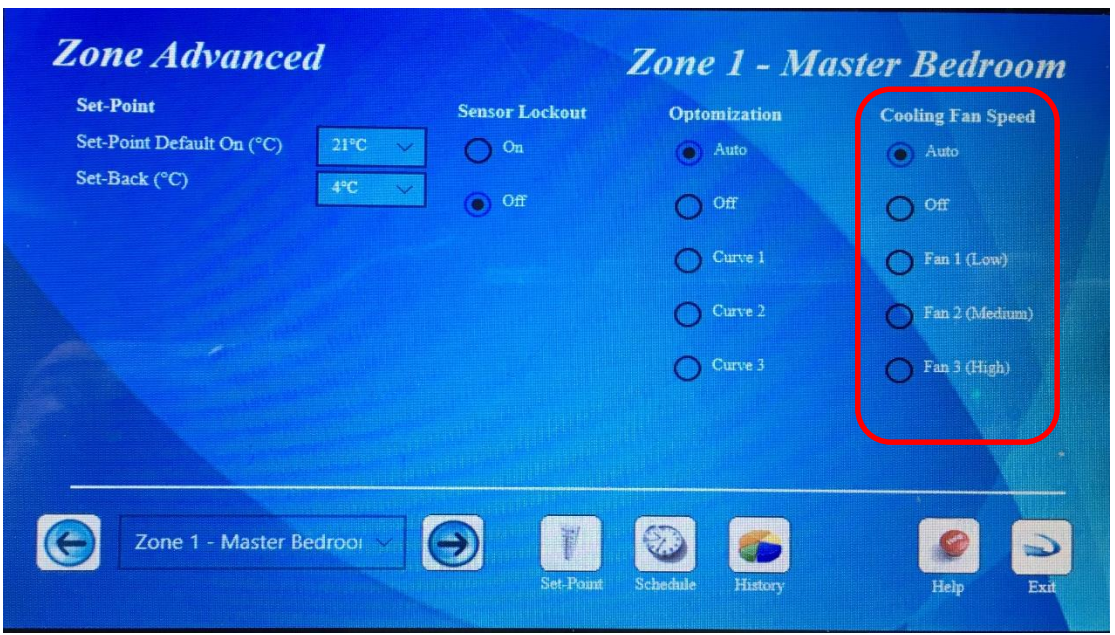

Step 3.- Select the Fan Speed to be continuously used irrespective of the air temperature


Off:	No Fan Speed
Auto:	Automatically adjust Fan Speed based on room temp
F1:	Fan Speed 1 (Low)
F2:	Fan Speed 2 (Mid)
F3:	Fan Speed 1 (High)

Comment

This only applied to building with FCU & VRF Unit

3. Advanced Room Settings


7. How can I set a Night Time Cooling Max Limiter Schedule

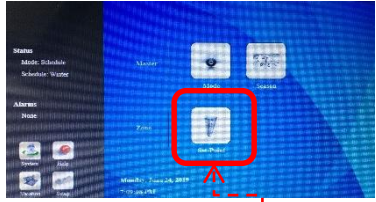

Step 1. Master Mode



Step 3. Zone Settings

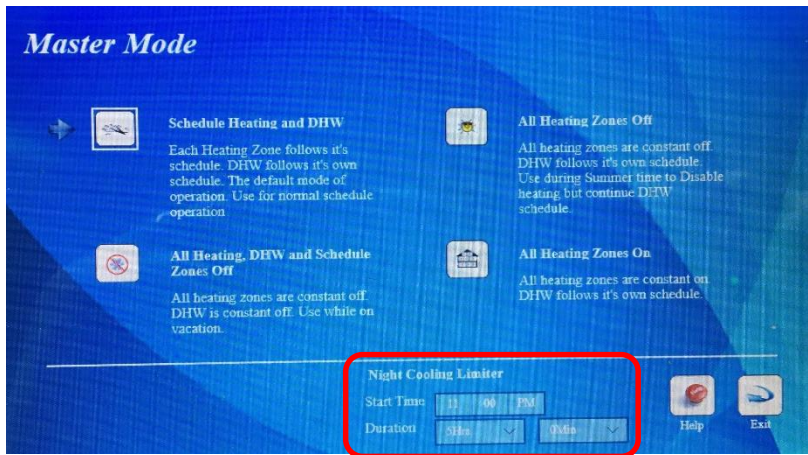

Step 2. Set Cooling Max Schedule


- Start Time
- Duration in Hr.

Cooling Maximum is applied during the period defined by the Start time and Duration.

Press Home (Return Key)



Step 4.- Advance Settings

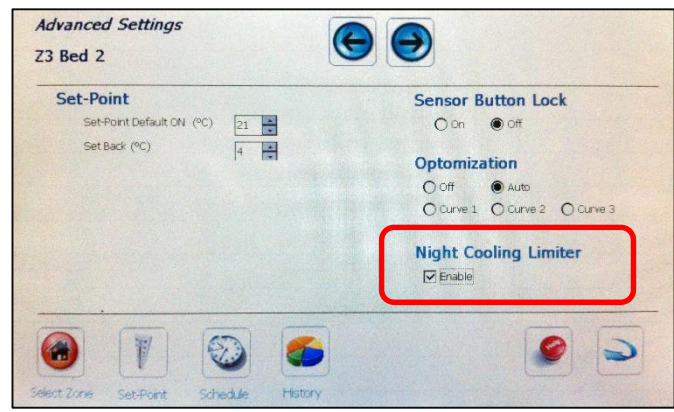


Step 5.- Enable individual Zones Night Time Cooling Limiter

Comment


²⁶
This only applied to building with FCU (Fan Coiler Units controlled via 0-10v outputs

4. Hot Water


1. Can I adjust the temp of my hot water

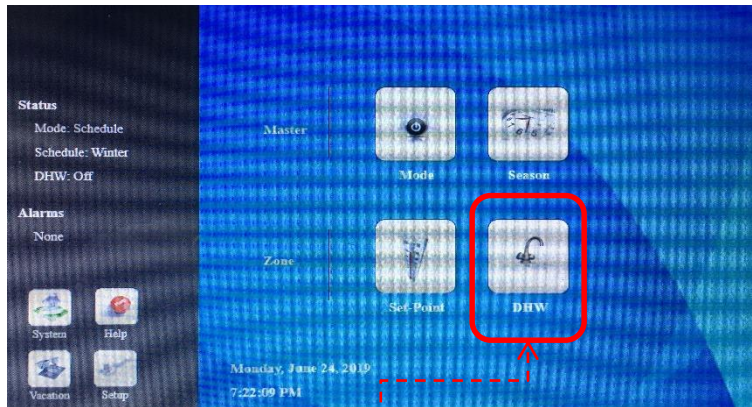


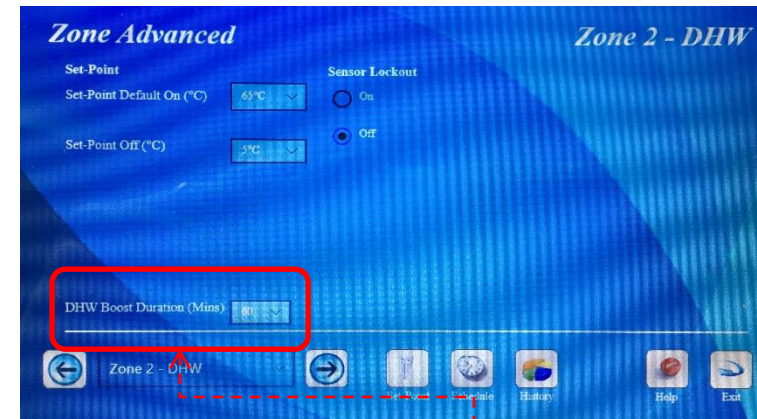
Step 1. Press – Domestic Hot Water

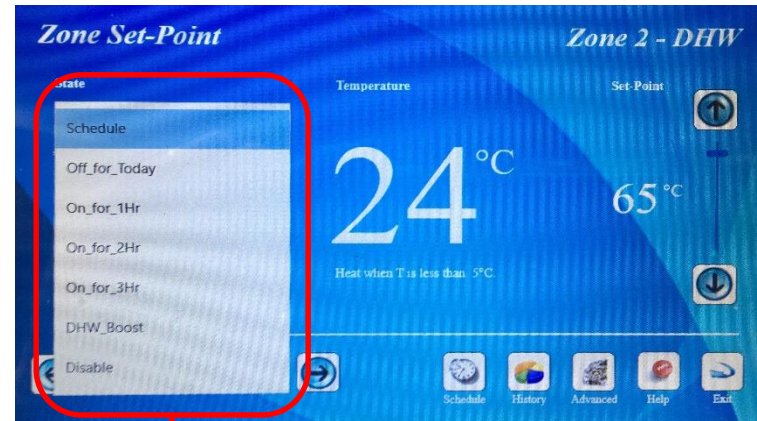

Step 3. DHW State Options

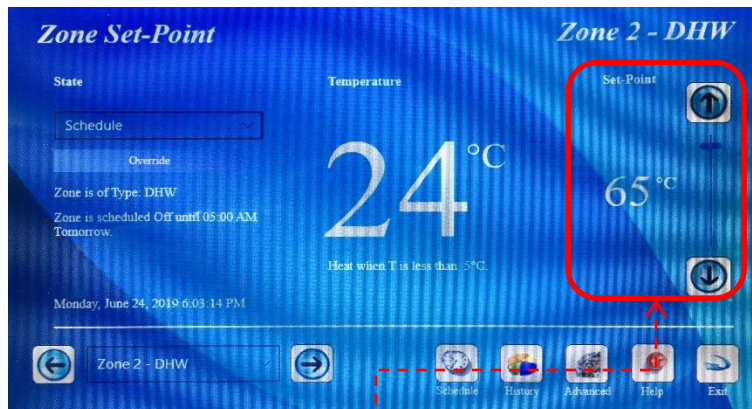


Step 2. Use   keys to adjust temp



Step 4. In Advanced - Adjust Boost Duration

4. Hot Water


2. Can I adjust the schedule of my hot water

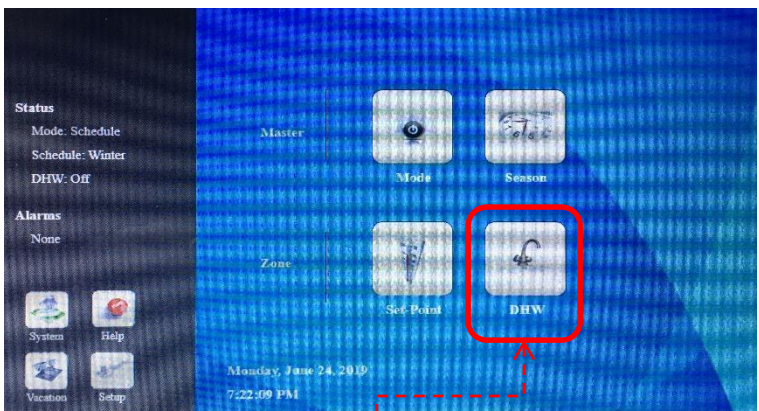

Step 1. Press – Domestic Hot Water



Step 2. Press – Schedule

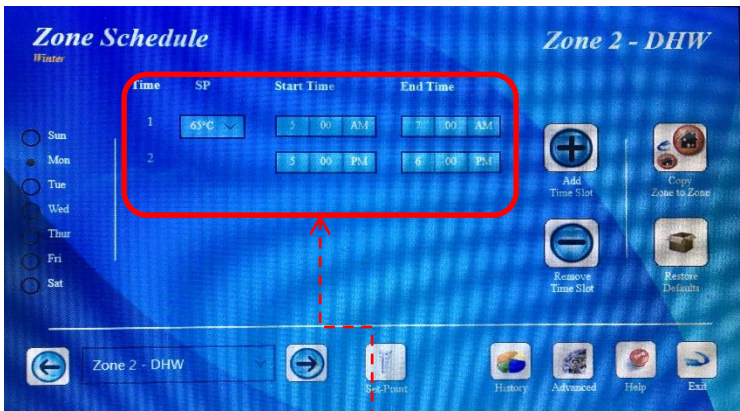


Step 3. Use   keys to schedule




Step 4. Select days

4. Hot Water

3. Is there a handy Boost to switch on my Hot Water for a short period

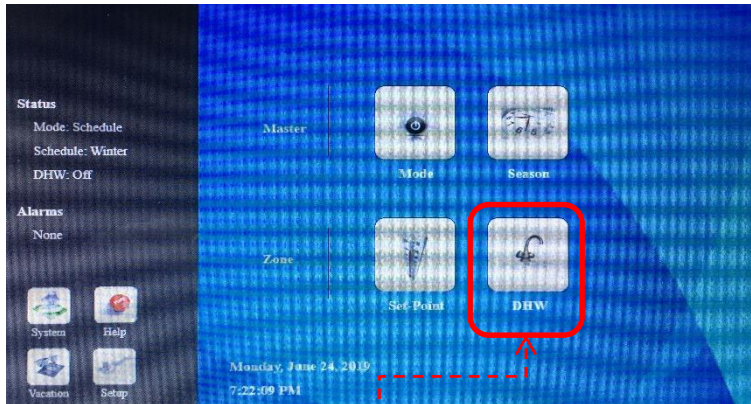


Step 1. Press – Domestic Hot Water

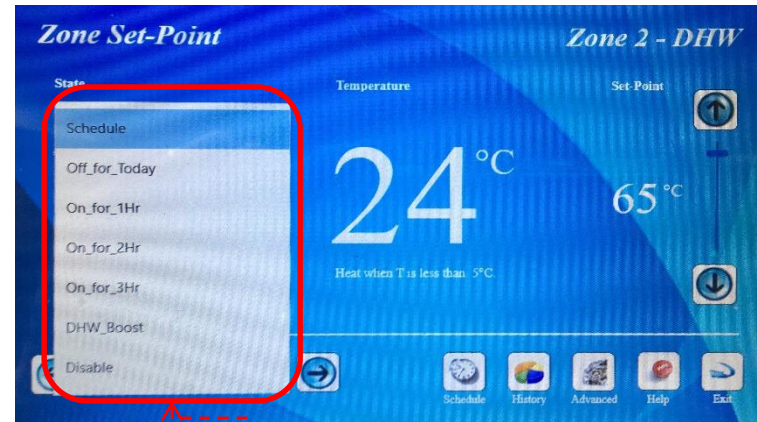

Step 2. Press – Boost


Boost Button will heat HW
With adjustable time from 10min – 2Hr
Mode.
Once the water has reached the
desired SP the demand will stop

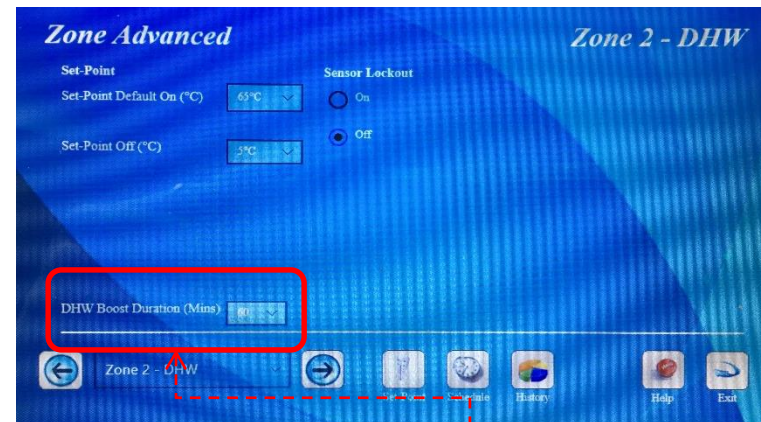


Step 3. In Advanced - Adjust Boost Duration

5. Holiday

1. How do I set the holiday setting

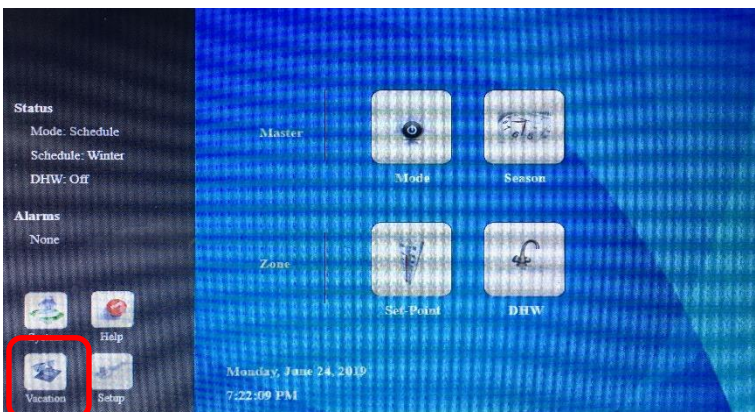


Step 1. Press – Holiday Setup

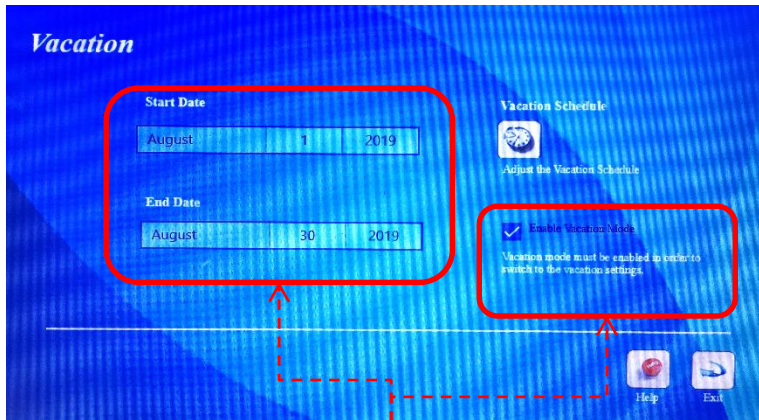

Step 2. Select Dates Required
Step 3: Select Enable Vacation Mode

6. Whole House Master Setting

1. Can I switch the whole house to different setting

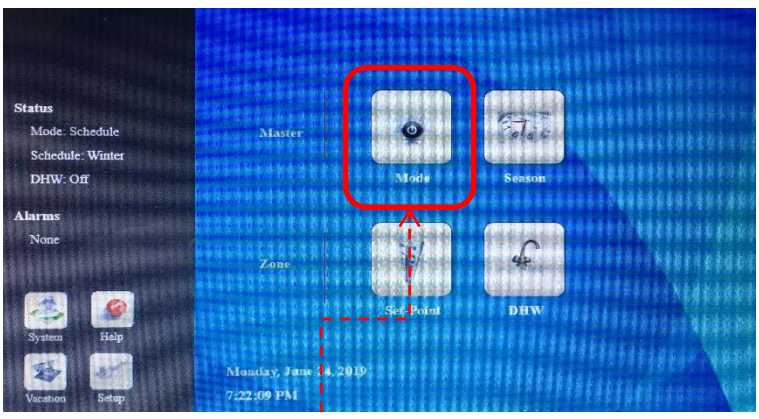

Step 1. Press – Master Setting

Step 2. Select Schedule Heating /DHW Zone

OR


Step 2. Select All Heating Zones OFF

OR

Step 2. Select All Heating Zones ON

OR

Step 2. Select All Heating /DHW/Sch OFF

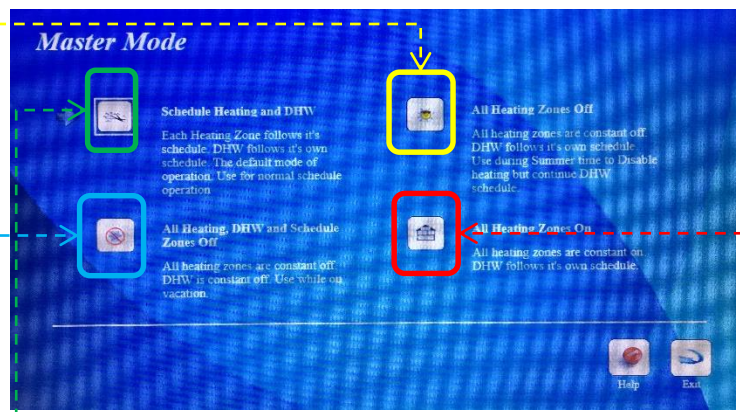

Note: Each zone will follow it's respective time & Temperature


Note: Summer Time Operation

Note: Zones use their *Default ON Temp set in Advanced*

Note: Frost protect while away
 Ufh = Set Back
 All other zone Rad/DHW/Sch = Off

7. Quick View

1. Can I look at all the room temperatures together

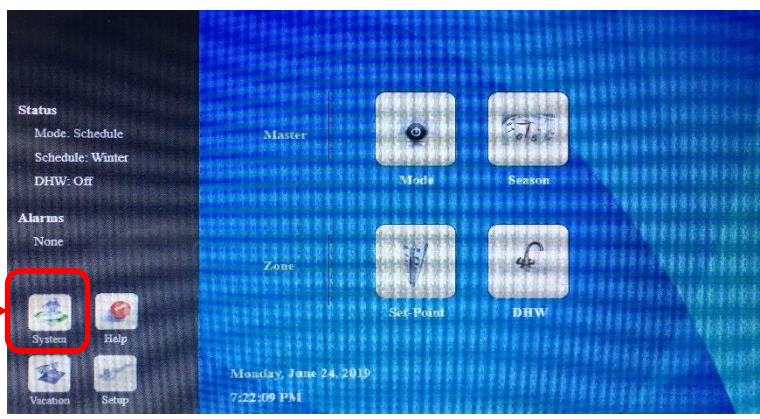

Step 1. Press – System Status

System Status

Id	Label	Mode	T	Sp	Heating Scheduled	Heating Actual	Cooling	Comms Status
1	ROOM 34	Schedule	25°C	21°C	OFF	OFF		✓
2	ROOM 35	Schedule	25°C	21°C	OFF	OFF		✓
3	ROOM 36	Schedule	25°C	21°C	OFF	OFF		✓
4	ROOM 37	Schedule	24°C	21°C	OFF	OFF		✓
5	HALL ROOM 38	Schedule	25°C	19°C	OFF	OFF		✓
6	ROOM 38	Schedule	26°C	21°C	OFF	OFF		✓
7	ROOM 39	Schedule	26°C	21°C	OFF	OFF		✓
8	ROOM 40	Schedule	26°C	21°C	OFF	OFF		✓

Zones 1-8 Zones 9-16 Zones 17-24 Zones 25 - 32

Help Exit

The status of each zone is display.

Overview:
This screen displays the statuses of each zone

Zn: Zone Number
Name: Zone Name
T Actual zone temperature
SP Desire Set Point Temperature
Mode Norm: Follows Schedule
 Stop: Ignore schedule & stay at Set Back
 Disable: Ignore schedule & stay at Frost protect

Schedule Heating State
ON If scheduled ON & OFF if scheduled OFF


Actual Heating State
Display the actual stats of the zone
Example:
A zone may be schedule OFF, but if the below it's SB (Set Back) temp the zone will be calling for heat

Cooling
Display ON if a zone is calling for cooling


Comms Stats
✓ Good Communication with sensor
x Lost Communication with sensor

8. Historical Log


1. Where can I view heating energy use for each room

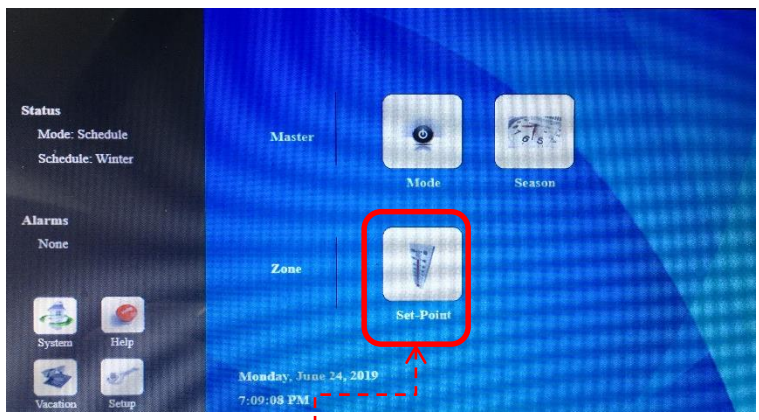

Step 1. Press – Zone Set-Point

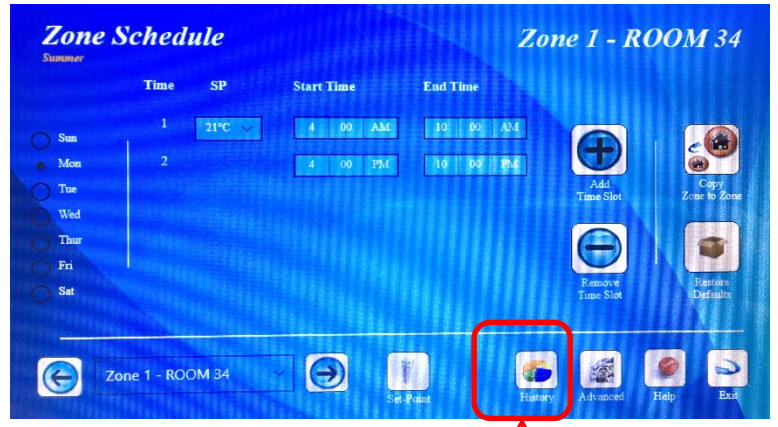

Step 2. Press - History

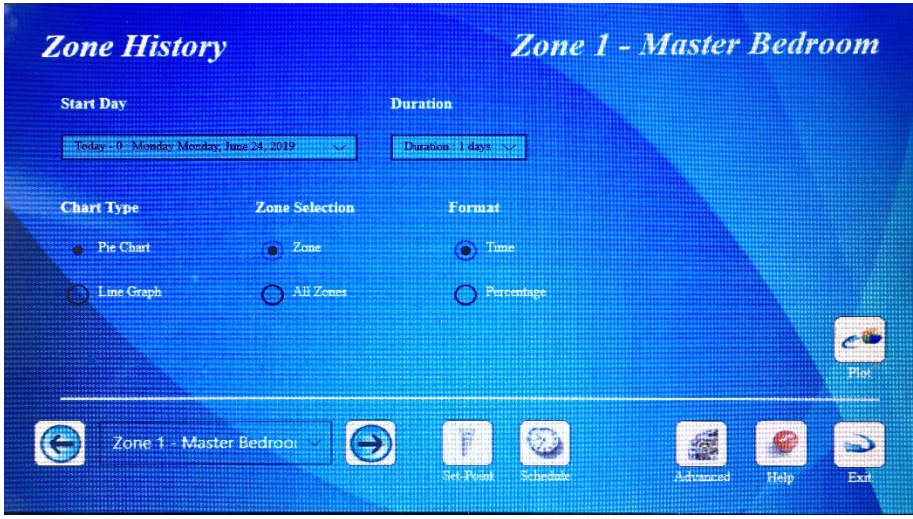


History
Energy use can be viewed by

- Zone or Whole Dwelling
- Hr or % Usage
- Over different periods

9. User Manuals

Where can I find the User Manuals

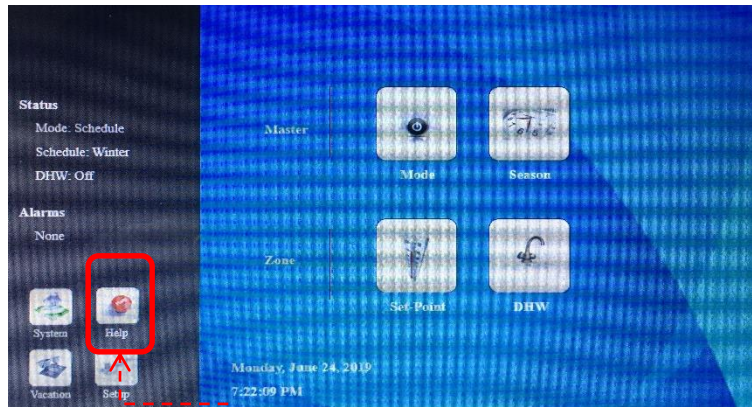

Step 1. Press – Help




Step 2 Select Required Manual

10. Master Clock

How can I adjust the Master Clock



Step 1. Press – Setup

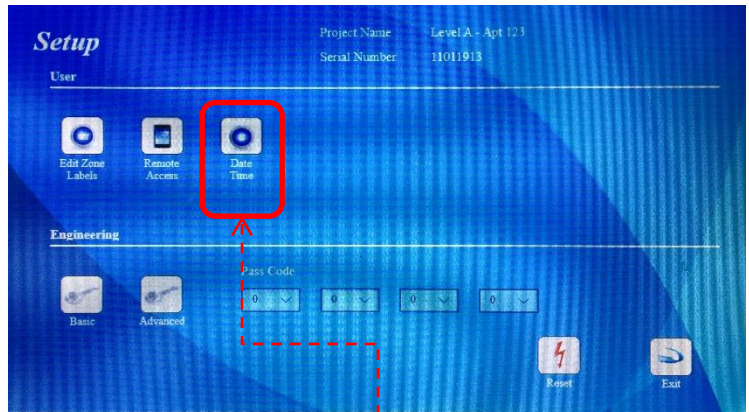


Step 2. Press - Time / Date


Comment:
If the time is amended, all zones SP (Set Point) will automatically change to the next scheduled SP value.

11. Room Names

How Can I Edit the Room Names

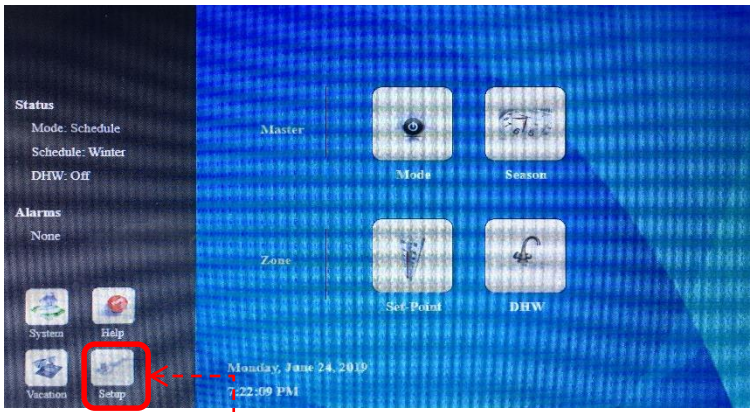

Step 1. Press – Setup

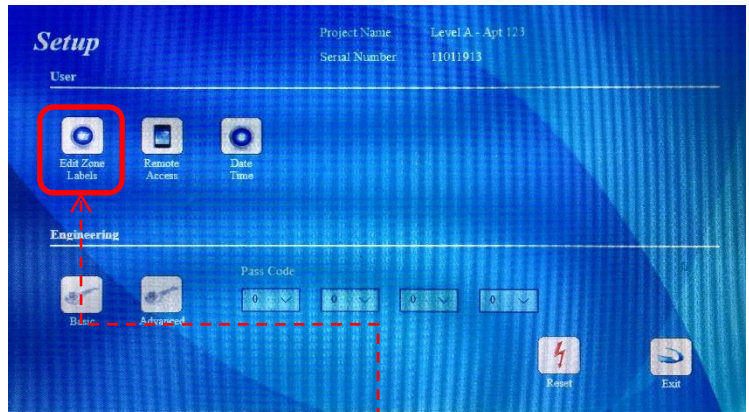


Step 2. Press - Edit Zone Names



Use the keypad to enter names
Use the ← → keys to move between zones

12. Engineering Assess

What is Engineering Assess

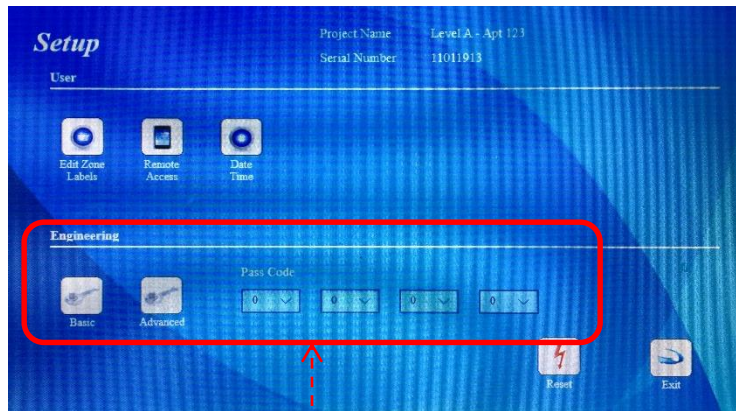

This area is used to configure the console to manage your dwelling.
This area is restricted to the installer.

13. Exit

How do I get back to the home screen



Use this return key to step back to the main screen