

© 2020 Criosu Controls Ltd

No part of this document may be reproduced by any process without the prior written permission from Criosu Controls Ltd.

The information in this document is provided for reference only. While every effort has been made to make sure it is accurate and complete, Criosu Controls Ltd does not accept any liability arising out of the application or use of the information or products described herein. Moreover, Criosu Controls Ltd reserves the right to alter specifications or procedures without notice.

This document may contain or refer to information or products protected by copyright or patents and does not convey any license under the patent rights of Criosu Controls Ltd nor the rights of others.

All products referred herein are trademarks of their respective owners.

ENVIRONMENT

(APP REV 20.1.19+)
(DOC REV 1)

CRIOSU CONTROLS

Table of Contents

| | |
|-------------------------------------------------------------------|-------------------------------------|
| Introduction..... | 2 |
| Access Screens: Zone Control, Setpoint and Schedule Default | 2 |
| Zone Control Screen..... | 3 |
| Zone Deactivation..... | Error! Bookmark not defined. |
| “Living” or” “Sleeping” Scheduling..... | Error! Bookmark not defined. |
| Digital and Probe Zone Reference | Error! Bookmark not defined. |
| Zone Setpoint Screen..... | Error! Bookmark not defined. |
| Cooling Setpoints | Error! Bookmark not defined. |
| Screed Setpoints..... | Error! Bookmark not defined. |
| Zone Schedule Defaults Screen..... | Error! Bookmark not defined. |

Introduction


The Zone Control, Setpoint and Default schedule screens provide access to zone control functions relating to the heating and cooling operation of the zone.

Access Environment Screen

Step 1. Press “Setup” on the Home Screen



Step 2. Press “Adv Setup” on the Setup Screen

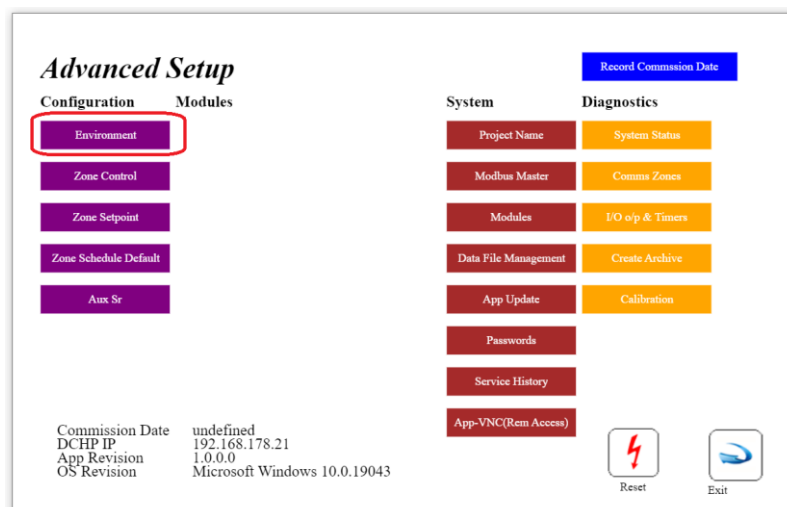

Environment Screen

The Environment Screen is used to setup basic system operation relating to Heating & DHW Setpoint ranges, Zone operation in the event of a communication fallout, Zone scheduling and User Interface backgrounds.

Environmelt

| | | | | | |
|----------------|--------------|-----|-----|-------------|------------------------------------------------|
| Heating | SP (°C) | Min | Max | Cooling(°C) | <input type="checkbox"/> Enable Floor Temp Adj |
| | UFH SB (°C) | 30 | 16 | 0 | |
| | Probe SP(°C) | 8 | 3 | 12 | |
| | | 99 | 5 | | |


| | | | | | | |
|------------|----------|----|---|-------------------|----------|--------|
| DHW | SP (°C) | 70 | 5 | Legionella (70°C) | Saturday | 4am |
| | Hys (°C) | 4 | | | | 1 Hour |

Sensor OffLine ZONES Force Off Follow Req State DHW ZONES Force Off Follow Req State

Schedule Type 7 Day 5/2 Day 24 Hour Single Set-Point

UI Home Screen Lock Sub Screens Follow

Windows Windows

 Exit