



NOVEMBER 23, 2021

© 2020 Criosu Controls Ltd

No part of this document may be reproduced by any process without the prior written permission from Criosu Controls Ltd.

The information in this document is provided for reference only. While every effort has been made to make sure it is accurate and complete, Criosu Controls Ltd does not accept any liability arising out of the application or use of the information or products described herein. Moreover, Criosu Controls Ltd reserves the right to alter specifications or procedures without notice.

This document may contain or refer to information or products protected by copyright or patents and does not convey any license under the patent rights of Criosu Controls Ltd nor the rights of others.

All products referred herein are trademarks of their respective owners.

CC200 DIGITAL INPUT FUNCTIONS (CC200-SM-IF)

(REV 20.1.6+)

CRIOSU CONTROLS



Table of Contents

Introduction.....	2
Module Requirements	2
Access DHW Priority Setup.....	3
Operation	4

Introduction

Override the Manifold Pump when Domestic Hot Water (DHW) is calling.

Module Requirements

Module Configuration

8 Zones ▾

Relay Config (CC200-SM-RC)

Relay Config Ext (CC200-SM-RCE)

Relay Timers & Cycling (CC200-SM-RTC)

Cooling (CC200-SM-CL)

PV (CC200-SM-PV)

PV Adv (CC200-SM-PV_ADV)

VRF (CC200-SM-VRF)

Modbus Slave (CC200-SM-MBS)

Alarms (CC200-SM-ALM)

Digital Input Functions (CC200-SM-IF)

Zone Differential (CC200-SM-DIFF)

DHW Priority (CC200-SM-DHW-P)

Relative Humidity (CC200-SM-RH-DP)

Configuration Code: 139587772101216957370091




Help




Exit

Access DHW Priority Setup

- Step 1. Press “Setup” on the Home Screen

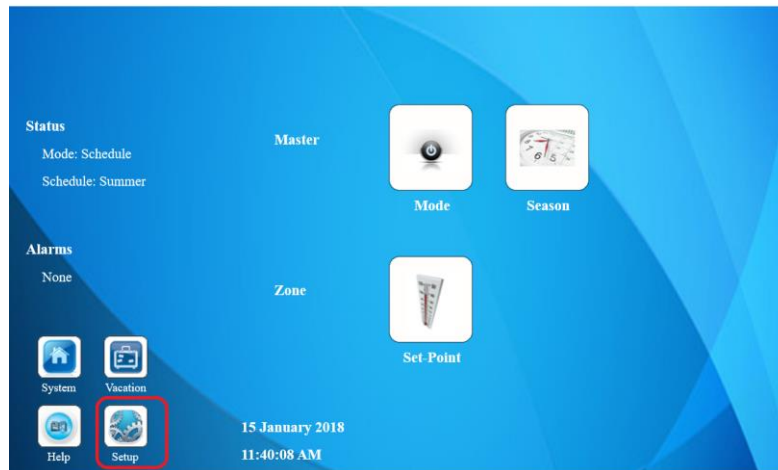


- Step 2. Enter “Pass Code” and press “Advanced” on the Setup Screen

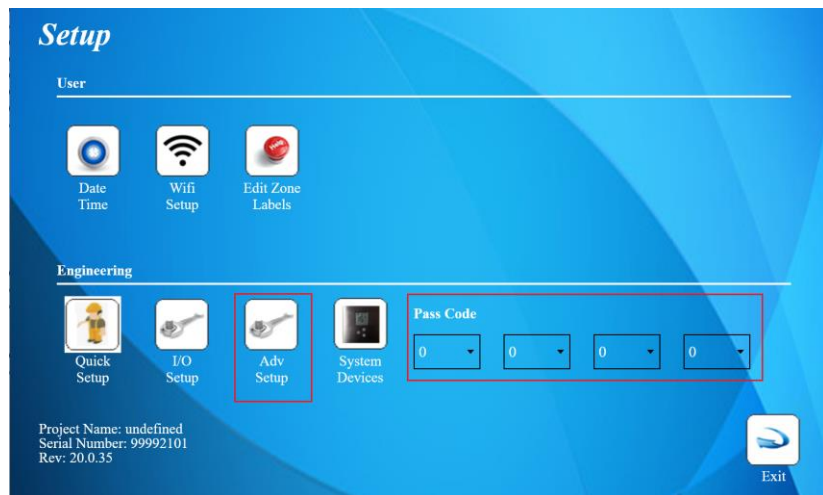

- Step 3. Press “Environment”

Press “Digital Input Functions”

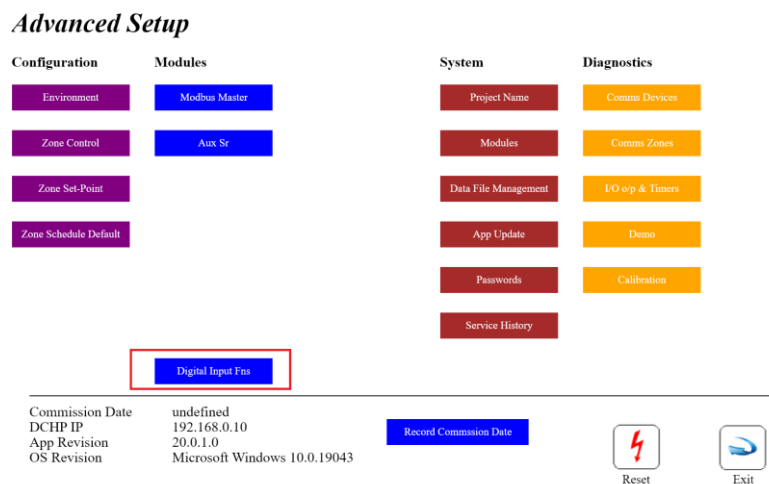



Operation

A Digital Input is assigned to a system function which is set while the input is set.

Digital Input Functions

	Input	Function	Input	Function
Input #1	1	Winter_Schedule	5	Unused
	2	Unused	6	Unused
	3	Unused	7	Unused
	4	Unused	8	Unused

Module #1	IO #1	IO #2	IO #3	IO #4

 
Help Exit

System Functions

- Winter_Schedule
- Summer_Schedule
- Economy_Schedule'
- Party_Schedule
- Vacation_Schedule
- Custom_Schedule
- Heating_Off
- Heating_ON
- Heating_DHW_Off