





Console Operation

To Change the System **MODE**

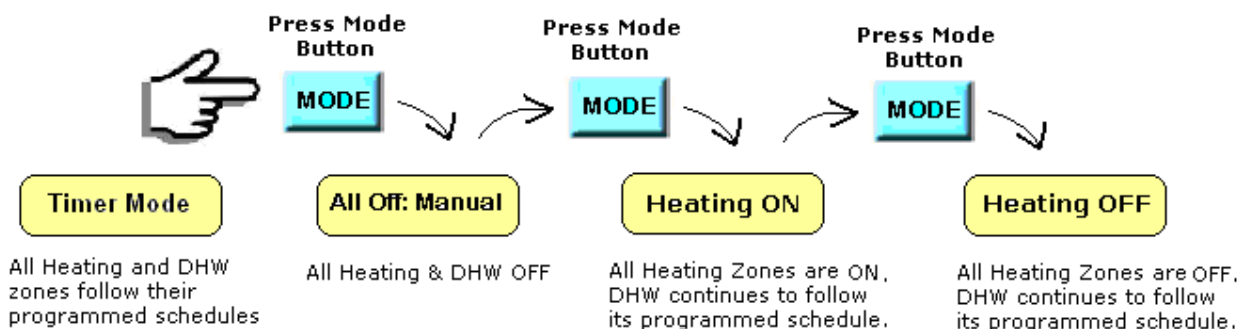



To Change a Zone **Setting**

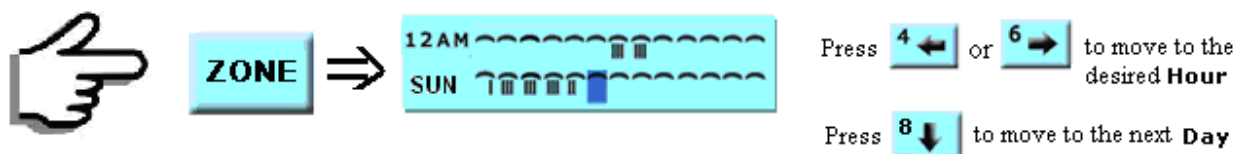

Press 1 [On/Off]	to time heat for 1st 20 minute period at SP	Shown as ↑
Press 2 [On/Off]	to time heat for 2nd 20 minute period at SP	Shown as ↑
Press 3 [On/Off]	to time heat for 3rd 20 minute period at SP	Shown as ↑
Press 5 [On/Off]	to time heat for the entire Hour at SP	Shown as
Press HW	to select set-points 2 through 5 for whole hour	Shown as 2



Note: Zone 1 is dedicated to DHW. Pressing the "HW" key will schedule the Immersion ("I") or, High Immersion ("I") for one hour.

"HW" will BOOST an UFH zone.

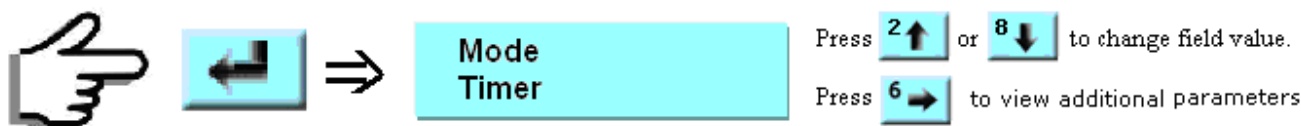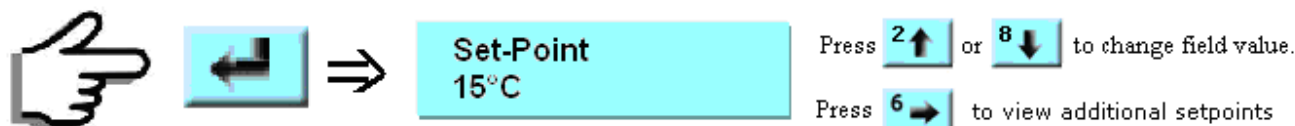



Sensor Operation

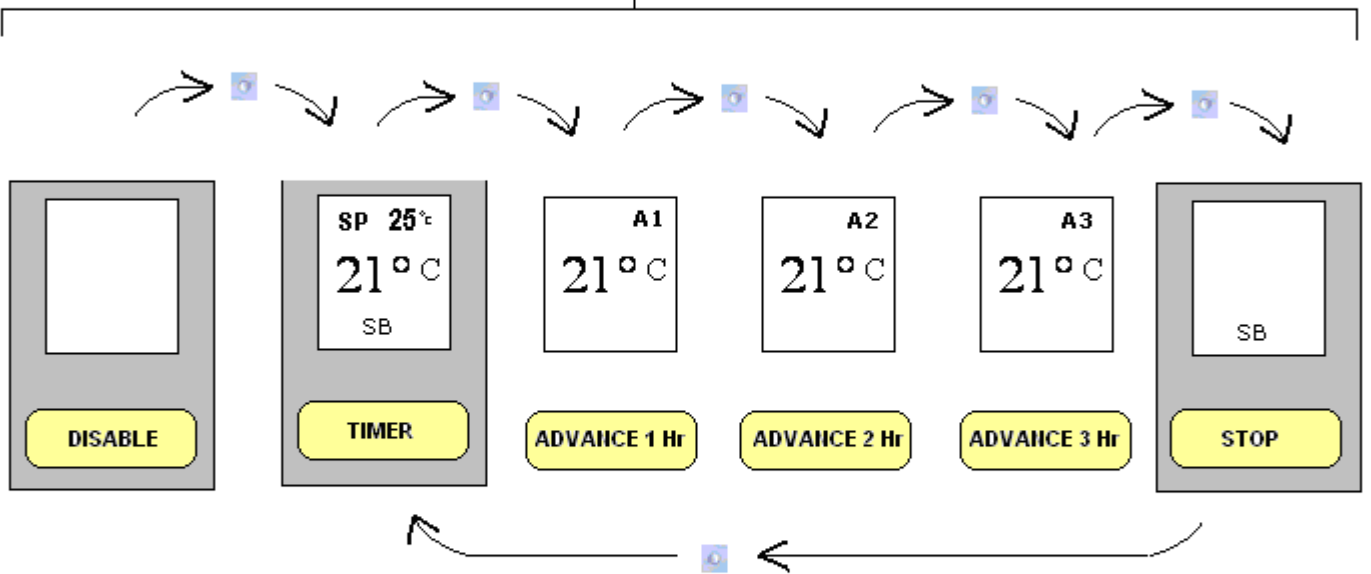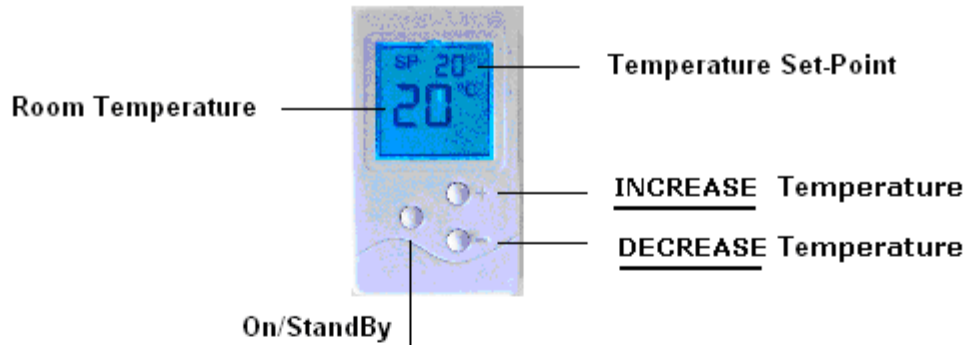

Change the Zone Mode to Disable.

Zone does NOT follow the programmed Schedule.

Normal Timer Scheduler.

Zone follows its individual programmed Timer Schedule.

Override Normal Scheduling and turn zone ON for 1 hour (A1) or, if ON then turn OFF (A0).

When A0 is set the zone will remain OFF while the zone is scheduled ON.

Override Normal Scheduling and turn ON zone for 2 Hours.

Override Normal Scheduling and turn ON zone for 3 Hours.

Change the Zone Mode to OFF (Stand By).

Zone does NOT follow the programmed Schedule.

The Zone "Advance" parameter enables the 1/2/3 Hr Advance functions.

Set-points return to default setting overnight. Defaults setting at programmed at the console.